


FITTING GUIDE 7506

AAS 7506

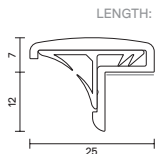

CONTENTS

- Aluminium carrier with pre-drilled countersunk fixing holes & self adhesive tape
- Semi-rigid Batwing® gasket
- Bag of screws
- Fitting guide

TOOLS REQUIRED

- Tape measure
- Pencil or marker
- Saw (power/hack)
- 2.5mm drill bit
- Drill
- Screw driver
- Knife
- Router (rebated installation)

For more information please call:

+61 (02) 9905 0868

All rights reserved. No part of this fitting guide may be reproduced, stored in a retrieval system, or transmitted in any means, electronic, mechanical, photocopying, recording or otherwise without the written permission of Lorient Polyproducts Limited. © Lorient Polyproducts Ltd 2018

www.lorientgroup.com
+61 (02) 9905 0868

Lorient Pty Ltd
Unit 30, 9 Fowells Road
Brookvale 2100
New South Wales
Australia



AAS 7506
PERIMETER
SEAL

INSTALLATION DETAIL

FACE FIXED

It is not necessary to remove the door from its hinges unless otherwise specified.

STEP 1

Remove the seal from the packaging and measure the height of the meeting stile.

STEP 2

Cut the aluminium carrier to required length.

STEP 3

Cut the semi-rigid Batwing® gasket to the required length.

STEP 4

Determine the door handing and position the carrier against the appropriate meeting stile and mark out the hole locations with a pencil. Use the self adhesive tape to help hold the position while fixing.

STEP 5

Drill pilot holes with a 2.5mm drill bit (if required).

STEP 6

Screw fix the aluminium carrier length to the meeting stile using the screws supplied.

STEP 7

Press the semi-rigid Batwing® gasket into the aluminium carrier. There are no fixings here, it is a simple interference fit.

STEP 8

Close the door and ensure the seal makes uniform contact with the opposite door leaf.

REBATED

STEP A

Determine the door handing and remove the door leaf to which the seal is to be fitted.

STEP B

Using a router, rebate a 12mm wide x 1.5mm deep groove to the stile.

STEP C

Re-hang the door and follow face-fixed fitting instruction steps 1 to 8.

NOTE

We recommend the AAS 7506 perimeter seal be fitted with any AURA® or LAS perimeter seal and drop seal.

IMPORTANT

Ensure that the installation of this product does not impede the opening or closing of the door. It is recommended to check the adjustment of the door seal periodically to ensure the door assembly to which it is fitted, closes and latches properly.

DISCLAIMER

Recommendations as to methods, use of materials and construction details are based on the experience and knowledge of Lorient and are given in good faith as a general guide and service to designers, contractors and manufacturers.

Lorient reserves the right to make alterations or delete installation detail without prior notice.