




PRE-HUNG DOORS

INSTALLATION INSTRUCTIONS


1. Determine Door Handing

- 1.1 Decide if door is to open from the left or right.
- 1.2 To determine your correct handing, stand on the inside of the room. Place your jamb in the opening with hinge knuckle facing you.
- 1.3 Confirm and mark the top of the jamb for cutting.

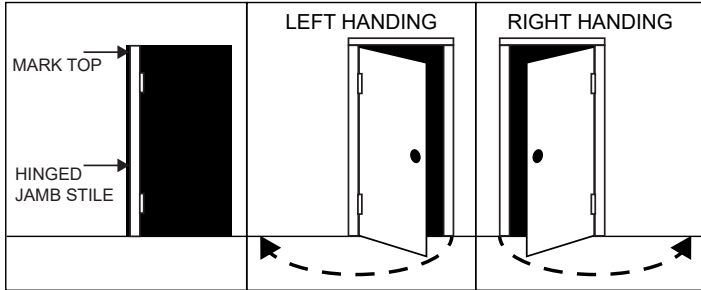

2. Measure for cutting

- 2.1 Measure from the top of the hinge plate (not hinge knuckle) and mark.
- IMPORTANT:** Ensure you have the correct tools and PPE for the job. Refer to our website link below for more information. Measurements vary depending on States. Use the table below for measurements.
 - 2.2 Square off and mark both the hinge and closing stiles, ensure jambs are level when making your final cut.

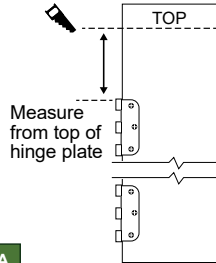

| HINGES | QLD & NT | VIC, TAS & SA | NSW, ACT & WA |
|----------|----------|---------------|---------------|
| Standard | 201mm | 189mm | 181mm |
| Lift Off | 207mm | 195mm | 187mm |

NOTE: All Pre-Hung doors come with 27-35mm Standard clearance from bottom of door to bottom of jamb.


3. Fit the jamb head

- 3.1 Fit the jamb head to the stile tops and nail/screw securely. Always pre-drill pilot holes before inserting screws.
- 3.2 Once assembled check your measurements.
- 3.3 Then stand assembled unit in its opening.



4. Fix hinge stile

- 4.1 Using a level make sure hinge stile is plumb.
- 4.2 Pack hinge where necessary and fasten to stud.

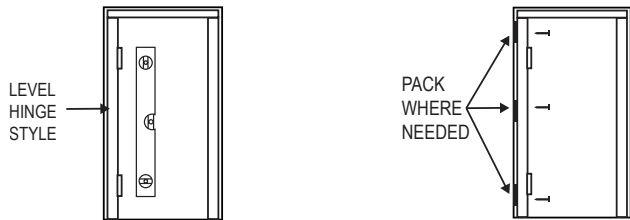


5. Seal the door

- 5.1 Seal your door top and bottom. Refer to manufacturer's warranty: <https://www.humedoors.com.au/downloads#guarantee>




6. Mount the door

- 6.1 Remove the hinge pins.
- 6.2 Place the door and jamb together, insert the hinge pins through the fitted hinges. You may require help to move the door if it is too heavy.
- 6.3 Ensure equal margins around the jamb set. Pack the closing stile if needed and nail to stud.

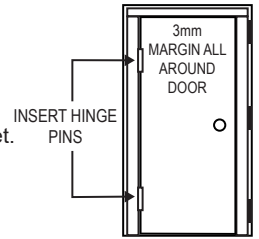


- 6.5 (Loose stop only) With the door in position and the jamb fixed off measure, mark out and cut the stop beads. Fit the hinge side first. Ensure equal margin (recommend 2mm) between door and the stop. Repeat this process for head stop and closing stop.

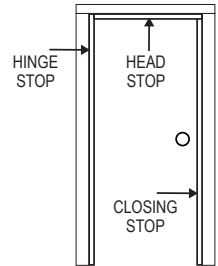

7. Finish off

- 7.1 Fasten mitred architraves sets.
- 7.2 Fit your selected handle and latch. Follow the manufacturer's instructions for your selected handle.

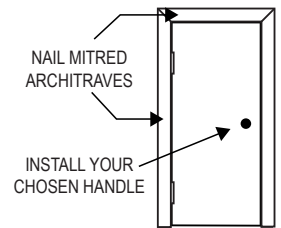

HOW TO INSTALL PRE-HUNG DOOR

Scan QR code for D.I.Y video or visit Hume How To on our website:

WATCH VIDEO



Contact Details

Sydney (NSW)
 Head Office & Showroom
 120 Hume Highway
 Lansvale 2166
 Ph: (02) 9794 1111
 Fax: (02) 9794 1199

Adelaide (SA)
 89 Heaslip Road
 Burton 5110
 Ph: (08) 8280 2000
 Fax: (08) 8280 8099

Brisbane (QLD)
 86 Mudgee Street
 Kingston 4114
 Ph: (07) 3489 6200
 Fax: (07) 3489 6299

Perth (WA)
 75 Briggs Street
 Carlisle 6101
 Ph: (08) 9470 1800
 Fax: (08) 9472 3802

Melbourne (VIC)
 33 Remington Drive
 Dandenong South 3175
 Ph: (03) 9799 6888
 Fax: (03) 9799 9688

100% AUSTRALIAN OWNED

www.humedoors.com.au