

APPLICATION GUIDELINES (JOIST PROTECTION)



1. Use appropriate VapourSeal widths for the frame e.g. 50mm



2. Ensure timber frame is dry and has been kilned to standard.



3. Make sure timber frame is free of any dirt, saw dust and




4. Apply VapourSeal onto the frame in a straight line and ensure



5. Do not stretch VapourSeal during installation ensuring slack is available.



6. Once applied go over the taped area with firm pressure to

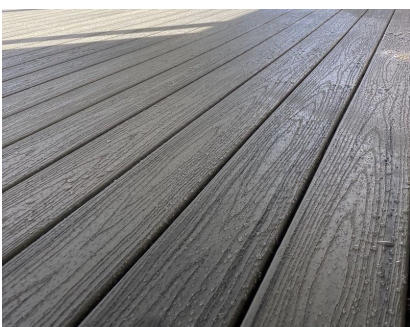

7. After installing VapourSeal proceed lay your boards.

Contact details:

info@vapourseal.com.au

Phone: 03 9118 8263.