

# CEMINTEL<sup>®</sup>

DESIGN AND INSTALLATION GUIDE



## INTRODUCTION

## TABLE OF CONTENTS

|   |           |   |           |
|---|-----------|---|-----------|
| <b>01 INTRODUCTION</b>                  | <b>2</b>  | <b>07 INSTALLATION</b>                    | <b>18</b> |
| Introduction                            | 2         | <b>Fixing Option 1</b>                    | 19        |
| <b>02 PRODUCT OVERVIEW</b>              | <b>3</b>  | Concealed Fixing –                        |           |
| Panel Information                       | 4         | Adhesive to Timber Stud                   |           |
| <b>03 SYSTEM OVERVIEW</b>               | <b>6</b>  | <b>Fixing Option 2</b>                    | 22        |
| Installation Method – Options           | 7         | Concealed Fixing –                        |           |
| Applications                            | 8         | Adhesive to Steel Stud                    |           |
| Benefits of the Cemintel Barestone      |           | <b>Fixing Option 3</b>                    | 26        |
| Internal System                         | 8         | Concealed Fixing – Timber Battens         |           |
| Product Specifications/System Solutions | 8         | For Retrofit Over Existing Linings        |           |
| <b>04 DESIGN + AESTHETIC</b>            |           | <b>Fixing Option 4</b>                    | 29        |
| <b>CONSIDERATIONS</b>                   | <b>9</b>  | Concealed Fixing – Timber Split Battens   |           |
| General                                 | 10        | <b>Fixing Option 5</b>                    | 32        |
| Internal Wind Pressures                 | 11        | Exposed Fixing                            |           |
| Control Joints                          | 11        | – Screw or Rivet To Steel Framing         |           |
| Structural                              | 11        | <b>08 CONSTRUCTION DRAWINGS</b>           |           |
| Panel Layout                            | 12        | <b>+ DETAILS</b>                          | <b>35</b> |
| Other Design Considerations             | 12        | <b>09 SAFETY, HANDLING + GENERAL CARE</b> | <b>39</b> |
| <b>05 COMPONENTS + ACCESSORIES</b>      | <b>13</b> | Health, Safety and PPE                    | 40        |
| <b>06 SYSTEM ENGINEERING</b>            | <b>16</b> | Handling & General Care                   | 40        |
| Design, Detailing and Performance       |           | <b>10 WARRANTY, CLEANING</b>              |           |
| Responsibilities                        | 17        | <b>+ MAINTENANCE</b>                      | <b>41</b> |
| Wind Loads                              | 17        | Warranty                                  | 42        |
| Stud Selection Tables                   | 17        | Inspection, Repair and Maintenance        | 42        |
|   |           | Cleaning                                  | 42        |

## Introduction

Cemintel's Barestone Internal walling system combines a prefinished surface with a simple installation system. Barestone Internal can be installed either horizontally or vertically.

This Design and Installation Guide recommends good building practice methodology and has been prepared as a general guide on design considerations, system engineering information and installation procedures for **common internal applications**. It assumes that the user has an intermediate knowledge level of building design and

construction. In no way does it replace the services of the building professionals required to design projects, nor is it an exhaustive guide of all possible scenarios. It is the responsibility of the architect, designer and various engineering parties to ensure that the details in this Design and Installation Guide are appropriate for the intended application.

Barestone Internal panels can also be used in ceiling/soffit applications. For fixing details for these applications, please contact **DesignLink on 1800 621 117**.



# 022


PRODUCT OVERVIEW

### Panel Information

Cemintel Barestone Internal panels are prefinished, compressed fibre cement panels that have an effective stain resistant coating applied to the panel face to combat standard household items such as oils, wine and food. They come trimmed and sealed in a standard 1200x2400x9mm size.

Consisting primarily of cement, sand, wood pulp, air and water, panels have been compressed to provide superior performance in terms of strength, density and durability. This makes them an excellent choice for internal applications requiring a higher level of impact resistance.

Barestone Internal is popular with architects and designers due to its contemporary raw concrete aesthetic. As with natural timber or stone, every piece is unique in colour and patterning reflecting the qualities of the natural ingredients used and the manufacturing process.

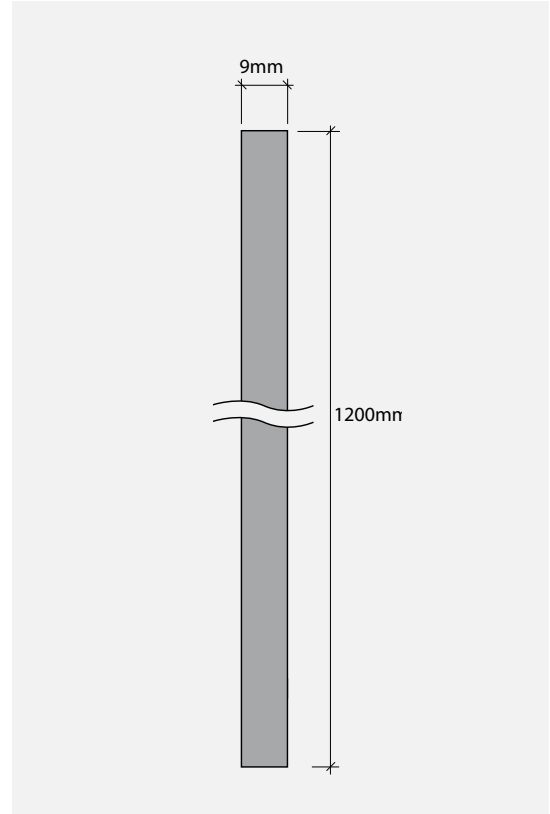

| Thickness (mm) | Width (mm) | Length (mm) | Mass (Nominal)        | Panels per pack |
|----------------|------------|-------------|-----------------------|-----------------|
| 9              | 1200       | 2400        | 17.8kg/m <sup>2</sup> | 10              |



PRODUCT OVERVIEW



A large, stylized number '03' is rendered in a light beige color, matching the background. The '0' is a simple oval, and the '3' has a curved top and a vertical stem. The number is positioned in the lower half of the page.

# 03

SYSTEM OVERVIEW



## SYSTEM OVERVIEW




This Design and Installation Guide outlines a system solution for installing Barestone Internal as an internal wall lining in dry areas.

Barestone Internal panels can be fixed to timber or non-structural light gauge steel framing, and can also be fixed to masonry, concrete or autoclaved aerated concrete substrates via timber battens or metal furring channels.

Panels can be installed in a number of different ways, using concealed fixing methods or exposed fasteners.

Panels are express jointed to give a clean, contemporary look. A closed cell, self adhesive decorative black tape is placed behind vertical joints. Depending on method of installation, the closed cell tape or a black metal backing strip is placed behind horizontal joints.

### Installation Method – Options

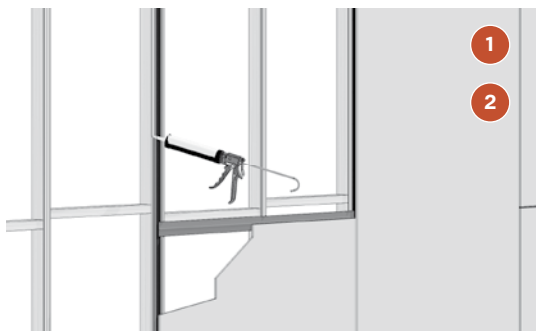

#### 1. Concealed Fixing – Direct Adhesive to Timber Framing

This system involves using SIKA adhesive products to directly fix panels to timber framing.



#### 2. Concealed Fixing – Direct Adhesive to Steel Framing

This system involves using SIKA adhesive products to directly fix panels to steel framing.



#### 3. Concealed Fixing – Batten (Retrofit)

Timber battens are installed over existing linings and panels are then fixed to battens using SIKA adhesive products. This provides a good solution for renovations and fitouts.



#### 4. Concealed Fixing – Split Batten

Barestone Internal panels are fixed to MDF battens and installed onto a split batten system. This allows for easy panel removal (important where access to services is required).

#### 5. Exposed Fasteners – Screw or Rivet Fixing

Panels are directly fixed to steel studs using exposed head screws or colour matched Barestone rivets. The unique Barestone rivet allows a subtle “sliding” movement across the panel which reduces the stress on the panel due to internal movement.

Panels can be installed horizontally or vertically in a staggered or aligned grid pattern.

## 03

## SYSTEM OVERVIEW



### Applications

Barestone Internal offers a clean, contemporary feature wall solution for all building types.

### Benefits of the Cemintel Barestone Internal System

- Low maintenance
- No requirement for additional painting costs
- Potential to speed up the construction process
- Large format panels
- Strong and durable – suitable for heavy duty environments
- Can be installed by concealed or exposed fixing methods
- Panels are easy to cut for openings e.g. around windows and power boxes
- Fire resistance – fibre cement sheets can be used where “non-combustible material” is required under the BCA deemed to satisfy provisions.



### Product Specifications/System Solutions

A Technical Data Sheet can be downloaded from [cemintel.com.au](http://cemintel.com.au)

| Dimensional/Geometrical Characteristic | Specification (trimmed panel) | Manufacturing Tolerance |
|--|-------------------------------|-------------------------|
| Panel Width                            | 1200mm                        | +0 -2mm                 |
| Panel Length                           | 2400mm                        | +0 -2mm                 |
| Panel Thickness                        | 9mm                           | +0.45 -0mm              |
| Panel Mass (EMC)                       | 17.6kg/m <sup>2</sup>         |                         |

| Fire Resistance & Thermal Properties        |   | Relevant Standard |
|---|---|-------------------|
| Combustibility                              | Classified as a “non-combustible material” under the BCA deemed to satisfy provisions.                                | BCA Vol 1 C1.9    |
| Classification                              | 1   | AS/NZ3837         |
| Surface Burning Characteristics             | Early Fire Hazard Indices are –<br>Ignitability = 0<br>Flame propagation = 0<br>Heat release = 0<br>Smoke Release = 0 | AS1530.3          |
| Fire Hazard Properties                      | Group Number 1<br>Average Specific Extinction Area <250m <sup>2</sup> /kg   | AS/NZ3837         |
| Thermal Properties (Conductivity)(λ-Factor) | 0.4108 W/m.k  |                   |



A large, stylized number '04' is rendered in white with a thick outline. The '0' is a simple oval shape, and the '4' is composed of three distinct strokes: a diagonal line from the top right to the middle left, a vertical line from the middle left to the bottom left, and a horizontal line from the middle left to the right. The number is positioned in the lower right quadrant of the page.

# 04

DESIGN + AESTHETIC  
CONSIDERATIONS

## 04

## DESIGN + AESTHETIC CONSIDERATIONS

**This section outlines some important areas for consideration in determining whether Cemintel Barestone Internal is suitable for the required application. The following points are not exhaustive. It is the responsibility of the Architect/Building Designer to ensure the design conforms to BCA requirements and other relevant building standards that may exist for that location. This guide should be read in conjunction with the BCA.**

### Panel Appearance and Finish

As with natural timber and stone, every Barestone panel is unique in colour, patterning and texture. The combination of natural ingredients and the manufacturing process will result in variation whereby some panels may have larger areas of light or dark colouring. There may also be white or black mineral deposits appearing through the panel which come from the raw materials and the manufacturing process. This randomness and uniqueness is what gives Barestone its character and is not a “fault”.

Note that product may vary from sample materials provided and the architect/builder/installer/owner should ensure that variation in look between panels is acceptable and meets aesthetic requirements prior to installation.

Being prefinished, special care needs to be taken prior to and during installation to protect panels and prevent staining and scratching.



## DESIGN + AESTHETIC CONSIDERATIONS



### Internal Wind Pressures

Panels and framing are required to resist internal wind loads that are specific to the building site. It is recommended that the Architect/Building Designer assigns the responsibility for the internal linings to the project engineer. Guidance on allowable internal wind pressures for the various installation system options outlined in this manual is provided in the 'System Engineering Section' of this guide.

### Control Joints

Panel Control joints should be installed to coincide with control joints in the supporting frame and where there are changes of substrate.

When installing Barestone Internal onto steel framing, a horizontal control joint is required at every slab junction to accommodate any deflection. The magnitude of the deflection must be verified by the project engineer.

### Structural

#### Framing and Substrate Options

For timber and steel framing, the minimum requirement shall be in accordance with the following standards:

- AS1684 – Residential Timber-Framed Construction
- AS/NZS4600 – Cold-Formed Steel Structures or AS3623 Domestic Metal Framing.

Note that Barestone Internal panels must not be fixed to wet framing / unseasoned timber as this can cause excessive timber shrinkage and cause Barestone Internal lining to move.

Cemintel provides stud selection tables for steel studs in the 'System Engineering Section' of this guide.

For Masonry, concrete or autoclaved aerated concrete substrates, furring channels must be installed.

### Frame Tolerances

It is critical that the frame is true and plumb. Any warping of the frame may still be visible after the internal lining is applied.

A suggested maximum tolerance of 5mm mis-alignment over 3000mm length is recommended.

### Battens

Installation methods 3 and 4 (refer to System Overview Section), require battens of 18mm thickness. Two batten widths are used. For sheet joints, a 92mmx18mm batten is used. At intermediate fixing points, a 66mmx18mm batten is used. Battens are to be fixed vertically to stud framing.

### Masonry/Concrete

Battens allow for correction of irregular surfaces. They are also a solution where the existing wall surface is not suitable for adhesive fixing due to flaking paint, drummy render etc.

Timber battens are either fixed directly to walls, or alternatively metal furring channel anchor clips can be used. These are attached to the wall prior to fitting the metal furring channels.

Use suitable masonry fasteners to securely fix timber/metal furring channels.

The spacing and fixing of anchor clips must be in accordance with the manufacturer's recommendations.

Pack behind battens as required to achieve a flat surface.

Support the Barestone Internal edges along the top and bottom of the wall.

### Curved Walls

Barestone Internal may be bent to a minimum radius of 10 metres to accommodate convex and concave curved walls. The framing must be set out to enhance appearance and avoid over-stressing the sheet and fixings. Where curved walls are installed, Barestone Internal panels must be screw or rivet fixed.

### Panel Layout

Barestone Internal panels can be installed horizontally or vertically onto the structural framework either in a grid or staggered layout.

The vertical joints between panels must be supported by double studs (with a total width of 70mm minimum). Horizontal panel joints need to be backed in accordance with the fixing system chosen (eg backing strip or batten with decorative tape).

When installing to timber or steel framing, the lower edge of bottom panels should be a minimum 6mm clear of the finished floor. Refer to Base Details in Construction Details/Drawings Section.

### Other Design Considerations

#### Exposed Fasteners

Barestone exposed head screws or Barestone rivets, with their unique rubber sleeve, can be used as mechanical fasteners for fixing Barestone Internal panels to metal framing. Barestone rivets allow a slight movement across the whole panel thereby reducing the stresses created where panels are installed with “fixed” points. Note: Use of standard rivets and gun heads is NOT ACCEPTABLE. Refer to installation instructions for further details

#### Concealed Fixing

It is important to ensure the substrate is properly prepared and is clean, dry and free of any material that will reduce the effectiveness of the adhesive bond (e.g. dust, loose paint/render, waterproofing etc). Refer to ‘Installation Instructions’ for further details.

#### Services

The Barestone Internal system will accommodate services that are run through the framing. Any notches or holes formed must be considered in the framing design.

#### Renovations

When undertaking building renovations, remove all lining from the original wall framing, unless utilising the Retrofit (Batten) installation method. Ensure the condition of the framing is in accordance with current requirements and is as true and plumb as possible (within accepted industry tolerance of 5mm misalignment over 3000mm). Install additional framing as required.


#### Limitations

Barestone Internal panels are not recommended and not warranted for the following applications –


- Wet areas (direct exposure to water) such as bathrooms, pools, water features
- Fireplace Cladding
- Exposure to temperatures greater than 50°C
- As a substrate for tiles or other materials to the face of the panel

The above listing is not intended to be comprehensive. If in doubt, please contact Cemintel.


**FIGURE 4.01** Horizontal Sheeting Aligned Grid Pattern

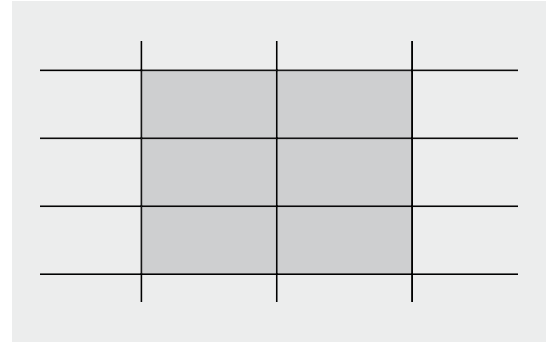


**FIGURE 4.02** Vertical Sheeting Half-Bond Pattern

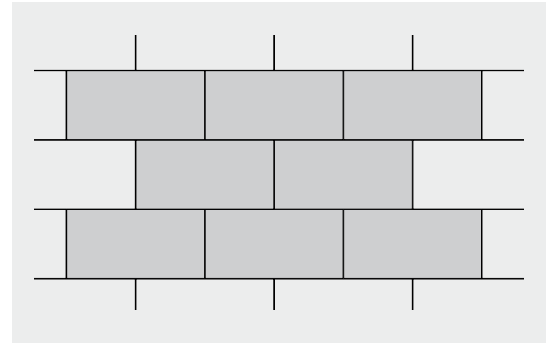

**FIGURE 4.03** Vertical Sheeting Aligned Grid Pattern

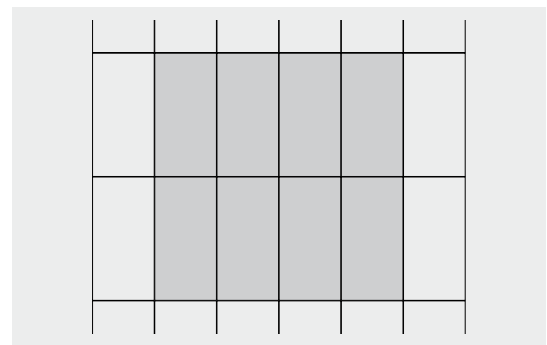

**FIGURE 4.04** Vertical Sheeting Half-Bond Pattern

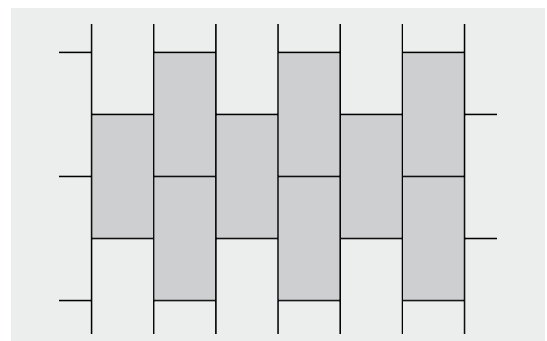

# 05

COMPONENTS + ACCESSORIES









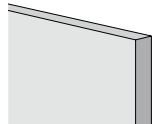



## 05

## COMPONENTS + ACCESSORIES

Note: Codes can change from time to time. Refer to the website for the current list of components prior to ordering.

### Accessories/Tools for Installing Barestone Internal

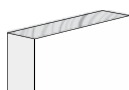\* **Fixing System Options** 1 = direct adhesive to timber stud 2 = direct adhesive to steel stud 3 = timber battens (retrofit)  
4 = split timber battens 5 = screw or rivet to steel stud

| Accessories   | Description   | Size                           | Product Code       | Fixing System Option* |
|---|---|--------------------------------|--------------------|-----------------------|
|    | <b>Batten Fixing Nails</b> – Machine driven D-head, class3. Used to fix timber battens to timber framing  | 2.80 x 50mm<br>(Box of 3000)   | 127799             | 3,4                   |
|    | <b>Batten Fixing Screws</b> – Class 3, countersunk ribbed head, Phillips drive, treated pine screw. Used to fix timber battens to timber framing.   | 8G-10 x 50mm<br>(Box of 1000)  | 127801             | 3,4                   |
|    | <b>Batten Fixing Screws</b> – Otter (SLEG+), countersnk ribbed head, Phillips drive, class 3, treated pine screw. Used to fix timber battens to steel framing or furring channels of 0.5 to 1.15BMT   | 8G x 32mm                      | 139844             | 3,4                   |
|    | <b>Masonry Anchors</b> – used to fix furring channels to masonry, concrete and AAC. Must be suitable for substrate (refer to manufacturer for product and installation advice)  |                                | Supplied by others |                       |
|    | <b>Panel Fixing Screw 8Gx32mm</b> – Self drilling security head. 410 Stainless Steel  | 8G x 32mm                      | 139844             | 5                     |
|  | <b>Panel Fixing Rivet</b> – Option for fixing Barestone Internal panels to steel framing or furring channels. Each rivet comes with an already assembled EPDM (TPS-SEBS) gasket. Rivet heads are colour matched to the panel. Rivets are manufactured from stainless steel consisting of V4A (equivalent to 316 grade) stainless steel mandrels and V2A (equivalent to 304 grade) stainless steel sleeves.<br>Note: Use only the Cemintel Rivet and Rivet Gun Head. Standard rivets and gun heads are NOT ACCEPTABLE. | 100 per pack                   |                    | 5                     |
|  | <b>Timber Batten 18mmx66mm</b> – For use when using concealed fixing (timber batten) method. Fix vertically to intermediate studs.  | 18mm x 66mm                    | Others             | 3                     |
|  | <b>Timber Batten 18mmx92mm</b> – For use when using concealed fixing (timber batten) method. Fix vertically to double studs at sheet joints.  | 18mm x 92mm                    | Others             | 3                     |
|  | <b>MDF</b> – 18mm MDF to be cut on site as required   | 18mm thick                     | Others             | 4                     |
|  | <b>Decorative Tape</b> – Sika Closed Cell tape for applying to centre of timber or steel studs or battens at panel joints to give the expressed joint an attractive black finish  | 26mm x 1.6mm x 23m<br>1 x roll | 132317             | 1,2,3,4,5             |
|  | <b>Double sided Adhesive Tape</b> – SikaTack Panel Fixing Tape for holding panel in place while adhesive sets   | 12mm x 3.3mm x 33m<br>1 x roll | 140681             | 1,2,3,4               |
|  | <b>Panel Adhesive</b> – SikaTack Panel-10 adhesive. Used to adhere panels to timber or steel studs or timber battens.   | 600ml<br>1 x sausage           | 154403             | 1,2,3,4               |







## COMPONENTS + ACCESSORIES





05

Note: Codes can change from time to time. Refer to the website for the current list of components prior to ordering.

\* **Fixing System Options** 1 = direct adhesive to timber stud 2 = direct adhesive to steel stud 3 = timber battens (retrofit)  
4 = split timber battens 5 = screw or rivet to steel stud



| Other Accessories  | Description  | Size                       | Product Code            | Fixing System Option* |
|--|--|----------------------------|-------------------------|-----------------------|
|   | <b>Primer</b> – Sika Primer 215. Applied to timber stud or timber batten surfaces prior to application of the SikaTack panel tape and adhesive.                                    | 250ml                      | 140550                  | 1,3,4                 |
|   | <b>Aktivator</b> – Sika Aktivator 100. Applied to steel studs prior to the application of the primer.  | 1ltr                       | 140611                  | 2                     |
|   | <b>Primer</b> – Sika Primer 206 G+P. Applied to the steel stud over the Sika Aktivator 100 and before SikaTack panel tape and adhesive. Also used to prime the back of the panels. | 250ml<br>1ltr              | 140549<br>167974        | 1,2,3,4               |
|  | <b>Horizontal Backing Strip</b> – used for backing horizontal sheet joints. High tensile Colorbond steel. Black  | 1194mm<br>2394mm<br>2994mm | 21089<br>21088<br>21087 | 1,2,5                 |


**Tools – Cemintel requires Barestone Internal rivets to be fixed with the following rivet tools to ensure a high level of accuracy.**

|   |   |                       |        |
|---|---|-----------------------|--------|
|  | <b>Barestone Internal Rivet Centralising Tool</b> – for drilling accurate rivet holes in the top hats. Fits a 10mm drill chuck to ensure that the 4.1mm rivet hole is perfectly centred in the pre-drilled panel.   | 1 each                | 132674 |
|   | <b>Barestone Internal Drill Bit Ø 4.1mm</b> – for use with Rivet Centralising Tool to drill accurate rivet holes into steel framing or furring channels   | 1 each<br>(pack of 5) | 132675 |
|  | <b>Barestone Internal Drill Bit Ø 9.5mm</b> – for drilling accurate holes in the Barestone Internal panel to accept the Barestone rivet. Fits standard 10mm drill chuck.  | 1 each                | 132673 |
|  | <b>Barestone Internal Blind Rivet Gun</b> – Cemintel recommends the use of the GESIPA® Accubird Battery Operated Blind Rivet Gun  | 1 each                | 133332 |
|  | <b>Barestone Internal Rivet Gun Nose Piece</b> – required to achieve the correct rivet fixing and offset. Attaches to the Gesipa Accubird battery operated, blind rivet gun and ensures the correct spacing of the rivet head from the panel face. Also designed to seat the larger rivet head correctly and prevent damage to the coloured rivet head. Note: Standard rivet gun nose piece is NOT ACCEPTABLE | 1 each                | 132676 |

### Other Tools

CSR recommends the use of the following tools in conjunction with appropriate dust reduction methods

| Product   | Description   | Size        | Quantity           | Product Code |
|---|---|-------------|--------------------|--------------|
|  | <b>Makita Plunge Saw Kit (1300W) includes 1400mm guide rail and bonus 165mm fibre cement saw blade</b> – excellent for cutting cement based sheets        | 165mm       | 1                  | 165485       |
|  | <b>Makita 165mm Fibre Cement Saw Blade</b> – ideal for use with the Makita Plunge saw and other 165mm circular saws fitted with vacuum extraction systems | 165mmx20x4T | 1                  | 165486       |
|   | <b>Makita VC3012M Dust Extraction Vacuum</b>  |             | Supplied by others |              |

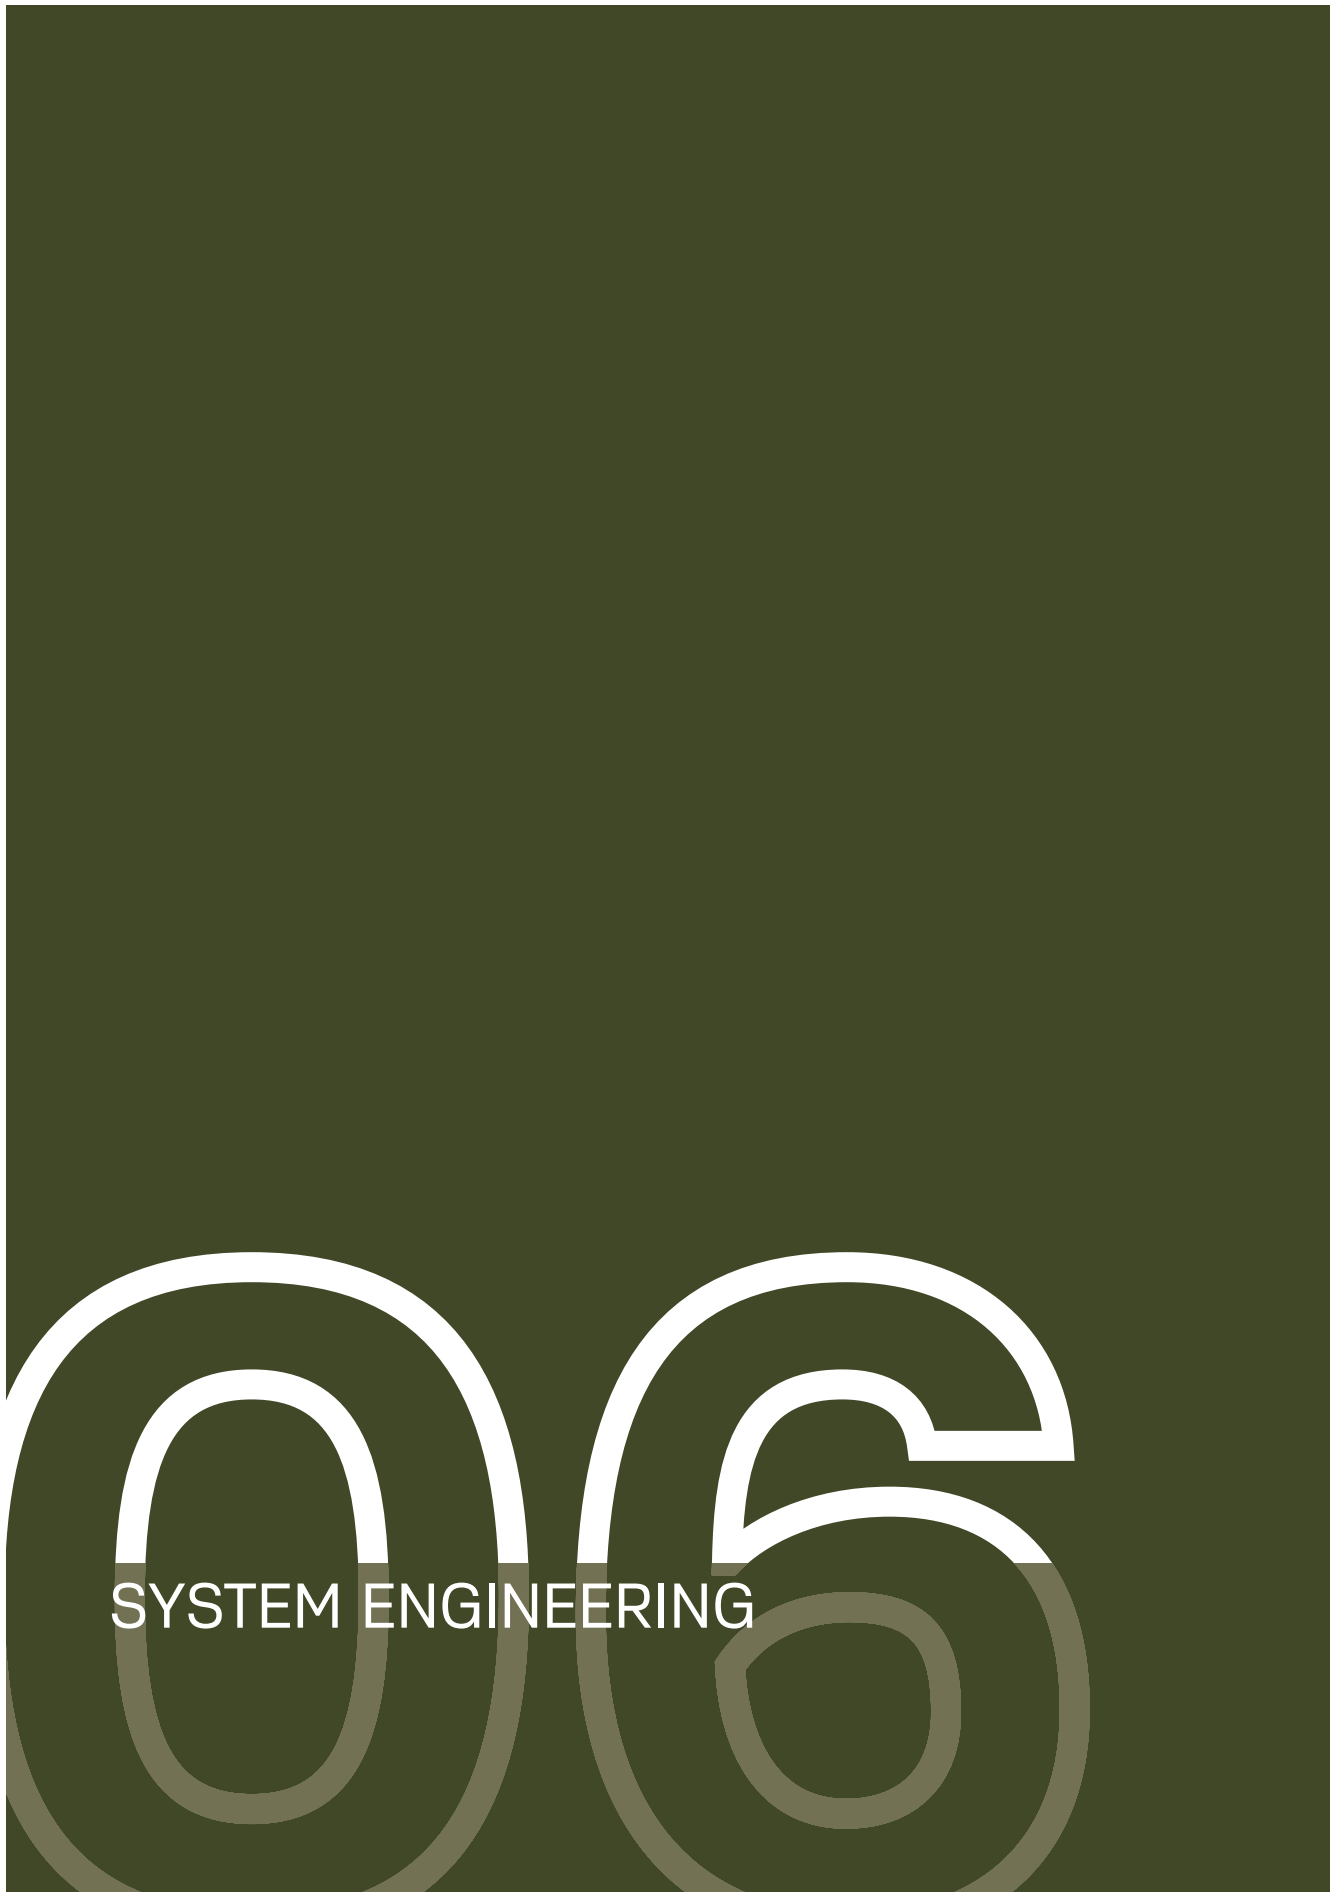

SYSTEM ENGINEERING

## SYSTEM ENGINEERING



## Design, Detailing And Performance Responsibilities

Cemintel does not provide consulting services. Cemintel only provides information that has been prepared by others and therefore shall not be considered experts in the field.

Any party using the information contained in this guide or supplied by Cemintel in the course of a project must satisfy themselves that it is true, current and appropriate for the application, consequently accepting responsibility for its use.

It is the responsibility of the architectural designer and engineering parties to ensure that the details in this design guide are appropriate for the intended application.

The recommendations in this guide are formulated along the lines of good building practice, but are

not intended to be an exhaustive statement of all relevant data.

Cemintel is not responsible for the performance of constructed walls, including field performance and does not interpret or make judgements about performance requirements in the BCA.





### Wind Loads

Barestone Internal concealed fix systems using Sika adhesives and screw or rivet fix systems are suitable for interior pressures up to 1.0kPa.

All support framing must be designed for the applicable wind pressures. Table 6.01 for Rondo steel framing is provided for interior pressures up to 0.375kPa.

## Stud Selection Tables (Steel Frame)

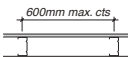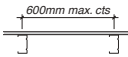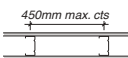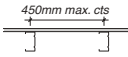

**TABLE 6.01** Maximum Wall Height with Rondo Lipped Steel Studs – Non-Loadbearing Internal Walls

| Stud size (mm)  | 64   |      |      | 76   |      |      | 92   |      |      |
|---|------|------|------|------|------|------|------|------|------|
|   | 0.5  | 0.75 | 1.15 | 0.5  | 0.75 | 1.15 | 0.5  | 0.75 | 1.15 |
| BMT (mm)  | 0.5  | 0.75 | 1.15 | 0.5  | 0.75 | 1.15 | 0.5  | 0.75 | 1.15 |
| <b>Single Studs @ 600mm max. centres</b>  |      |      |      |      |      |      |      |      |      |
|  | 3330 | 3930 | 4170 | 3700 | 4430 | 4650 | 4540 | 4830 | 5110 |
|  | 2720 | 3130 | 3530 | 3200 | 3580 | 4050 | 3610 | 4130 | 4690 |
| <b>Single Studs @ 450mm max. centres</b>  |      |      |      |      |      |      |      |      |      |
|  | 3580 | 4180 | 4460 | 4020 | 4780 | 5070 | 4850 | 5270 | 5620 |
|  | 2930 | 3410 | 3870 | 3500 | 3910 | 4450 | 4050 | 4520 | 5150 |

#### Notes:

Deflection Limit is SPAN/240 to a maximum of 30mm. Tabulated heights do not include axial loads (except self-weight), or shelf loading. Loadings: Pultimate = 0.375 kPa, Pservice = 0.25 kPa. Noggings in accordance with Table 6.02 below. Tables have been prepared by Rondo Building Services Pty Ltd in accordance with AS/NZS4600.

**TABLE 6.02** Minimum Number of Noggings

| Stud configuration  | Wall height (m) | Number of noggings equally spaced |
|---|-----------------|-----------------------------------|
|  | 0 - 4400        | 0                                 |
|   | 4401 - 8800     | 1                                 |
|  | 0 - 3000        | 1*                                |
|   | 3001 - 6000     | 2*                                |

\* Studs must have an additional nogging at no more than 100mm from the top of the wall. Noggings should be screw fixed or crimped to both flanges of each stud.

# 07

INSTALLATION

**FIXING OPTION 1****CONCEALED FIXING – ADHESIVE TO TIMBER STUD**

The following pre-install checklist may assist with ensuring you have the best possible outcome when using Barestone Internal.

- Confirm framing alignment is in accordance with AS1684 Residential Timber-Framed Construction. Pack to straighten if necessary. Check with certifier regarding packing materials.
- Confirm your panel layout to determine the location of joints. Ensure studs are correctly located and of the appropriated thickness. Install additional studs if required (double studs are required at all vertical sheet joints).
- Ensure **studs** have been appropriately treated with primers (refer to following for details).
- Ensure **panels** have been appropriately treated (refer to following for details).
- Confirm the use of the backing strip if required.
- Check the panel size and trim cut if required to maintain the correct expressed joint size.



Check quality and quantity of panels and components before installing. If there is any sign of damage or visible defects in panels, or the colour/finish is not in keeping with the owners aesthetic requirements **DO NOT INSTALL**. Contact Cemintel to address any issues.

**FIGURE 7.01** Concealed fixing on timber frame



## FIXING OPTION 1

### CONCEALED FIXING – ADHESIVE TO TIMBER STUD INSTALLATION

- 1 **Ensure that studs are at correct centres** and that there are double studs at all vertical joints. Ensure the face of the frame is aligned.
- 2 **Treatment of timber studs**
  - Dry wipe stud faces.
  - Apply a thin coat of Sika Primer 215 to the entire stud face using a dry, clean brush or sponge.
  - Let dry for at least 30mins (>15°C) / 60mins (<15°C) or maximum 24hrs (follow manufacturer's instructions).

Note that Aktivators should NOT be used on porous substrates such as timber.


### 3 Prepare Barestone Internal panels

- Abrade/scuff bonding area (ie the areas on the back of the panel that will coincide with the timber studs) with a polyester scouring pad (i.e. 3M Scotch Brite Pad 7447)
- Remove dust from abrasion
- Shake can of Sika Primer 206 G&P thoroughly and apply a thin coat with a brush on the bond area as shown in 'Figure 7.02: Barestone Internal Panel Preparation'. Note - Do not dip brush directly into the bottle as this may introduce contaminants. Rather, decant the contents into a suitable clean container. Close the bottle immediately after use.
- Allow Sika Primer 206 G&P to dry for a minimum of 10 minutes, or maximum 24 hours.


- 4 **Apply the Sika decorative closed cell tape** centrally onto the primed vertical joints at double studs to the full height of the wall.

- 5 **Apply SikaTack double sided panel tape to the double stud on both sides of the closed cell tape.** Leave the release paper on the SikaTack panel tape and stop short at the top and bottom plates. Refer to 'Figure 7.03: Closed Cell Tape, Adhesive, Tape Layout'. And 'Figure 7.04: Sheet Joint Layout'.


**FIGURE 7.02** Barestone Internal Panel Preparation

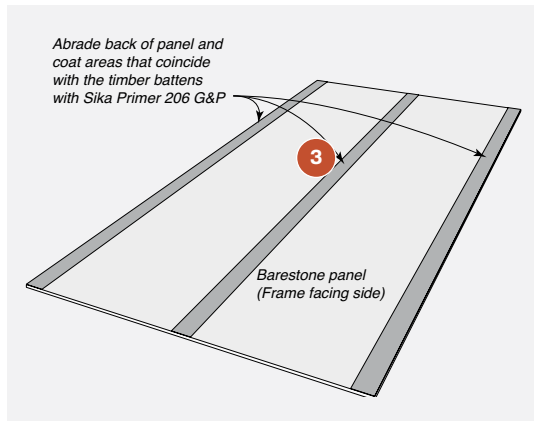

**FIGURE 7.03** Closed Cell Tape, Adhesive, Tape Layout

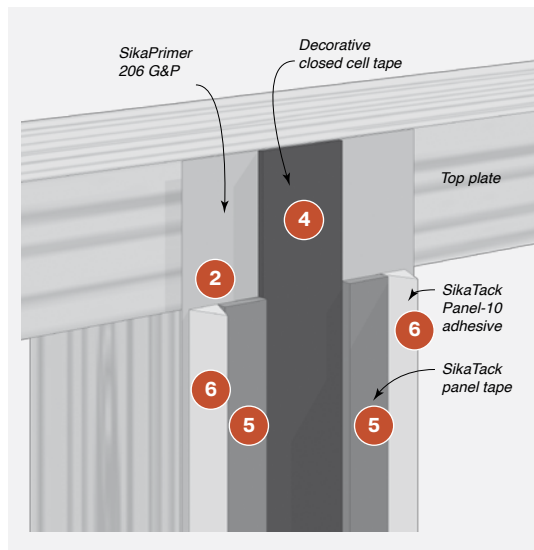

**FIGURE 7.04** Sheet Joint Layout

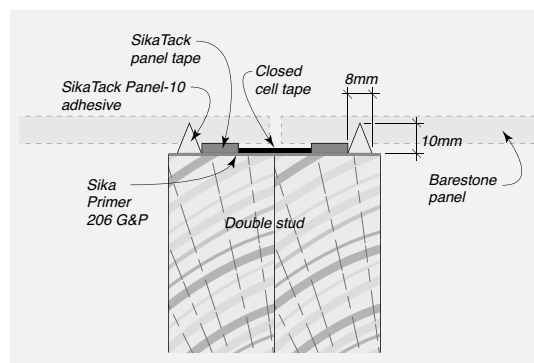







## INSTALLATION

07

**FIXING OPTION 1****CONCEALED FIXING – ADHESIVE TO TIMBER STUD INSTALLATION**

- 6 Cut a “v” on the SikaTack Panel-10 adhesive\* cartridge nozzle** of 8mm wide x10mm deep. Continuously run two triangular beads (8mm wide, 10mm deep) of SikaTack Panel-10 adhesive vertically to the bond area on the timber studs either side of the SikaTack panel tape but stop short at the top and bottom plates. \*Note: the open time (or working time) of SikaTack Panel-10 is 45 minutes (at normal conditions of 23 degrees celsius, 50% relative humidity), so the panel must be pressed onto the adhesive/tape system within that time or less.
- 7 At intermediate studs.** Run SikaTack panel tape and one bead of SikaTack Panel-10 adhesive the full height of the stud but stop short at the top and bottom plates. Refer to 'Figure 7.05: Intermediate Stud Layout'.
- 8 Install horizontal backing strip** by removing release paper on the SikaTack panel tape and pressing onto the tape and adhesive, as shown in 'Figure 7.06: Horizontal Backing Strip'.
- 9 When panels are ready to be installed,** remove white release paper on the SikaTack panel fixing tape and firmly press the panel onto the tape and adhesive. The tape will provide adequate hold strength while the adhesive sets. Refer to 'Figure 7.07: Panel Installation'.

Allow 6mm clearance between bottom panel and floor to allow for frame movement/shrinkage.  
Tip – Use packers (or cut panels) at the base vertical and horizontal joints to ensure uniform joint spacings. Remove once the adhesive is set.

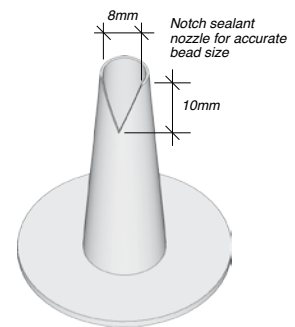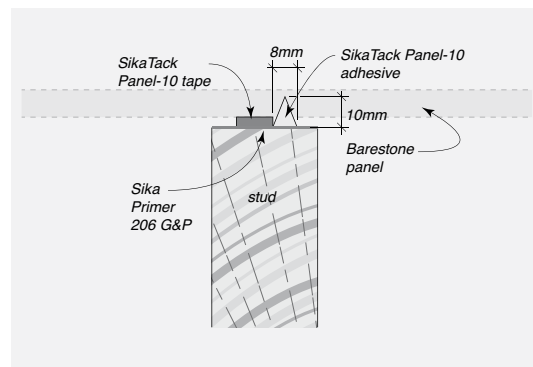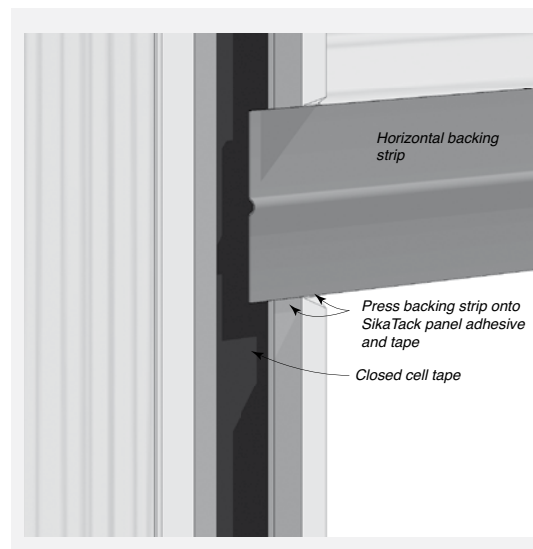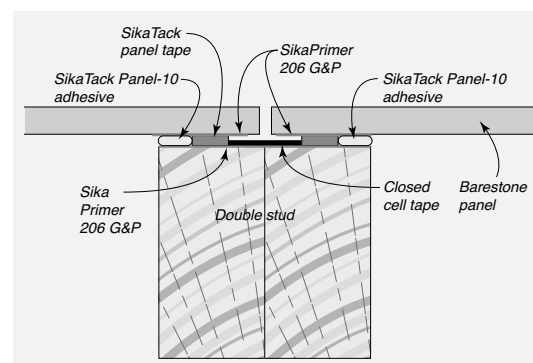**FIGURE 7.05** Intermediate Stud Layout**FIGURE 7.06** Horizontal Backing Strip**FIGURE 7.07** Panel Installation

**FIXING OPTION 2****CONCEALED FIXING – ADHESIVE TO STEEL STUD**


The following pre-install checklist may assist with ensuring you have the best possible outcome when using Barestone Internal.



Check quality and quantity of panels and components before installing. If there is any sign of damage or visible defects in panels, or the colour/finish is not in keeping with the owners aesthetic requirements DO NOT INSTALL. Contact Cemintel to address any issues.

- Confirm framing alignment is in accordance with AS/NZ4600 Cold-Formed Steel Structures and AS3623 Domestic Metal Framing). Pack to straighten if necessary. Check with certifier regarding packing materials.
- Confirm your panel layout to determine the location of joints. Ensure studs are correctly located and of the appropriated thickness. Install additional studs if required (double studs are required at all vertical sheet joints).
- Ensure **studs** have been appropriately treated with primers (refer to following for details).
- Ensure **panels** have been appropriately treated (refer to following for details).
- Confirm the use of the backing strip if required.
- Check the panel size and trim cut if required to maintain the correct expressed joint size.

**FIGURE 7.08** Concealed Fixing on Steel Frame

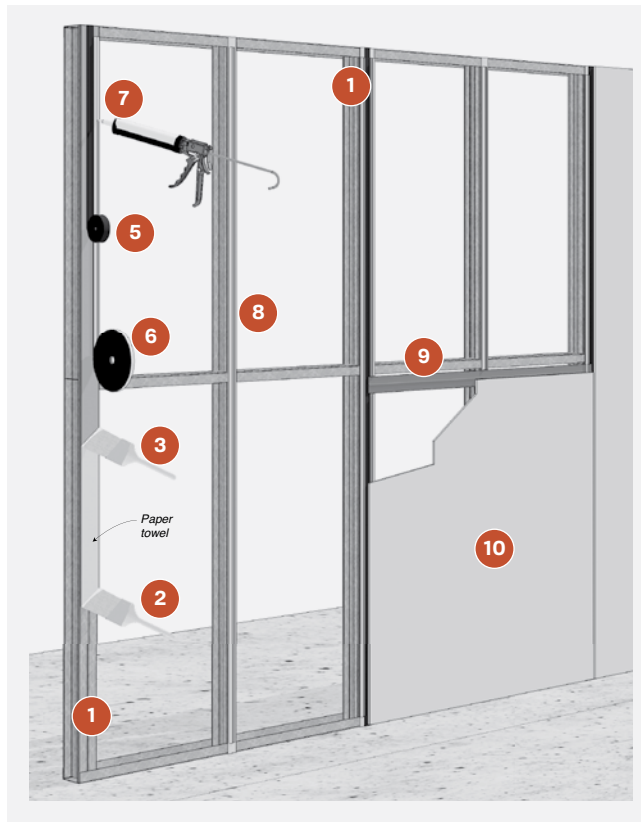


**FIXING OPTION 2****CONCEALED FIXING – ADHESIVE TO STEEL STUD**

- 1 **Ensure that studs are at correct centres** and that there are double studs at all vertical joints. Ensure the face of the frame is aligned.
- 2 **Treatment of steel studs (Aktivator)**
  - Abrade bonding area with a polyester scouring pad (i.e. 3M Scotch Brite Pad 7447)
  - Remove dust from abrasion
  - Apply Sika Aktivator-100 to stud face / bond area with a clean lint free paper towel. Turn and change the towel frequently. Immediately remove excess with a dry, clean paper towel (wipe on/ wipe off)
  - Allow Sika Aktivator-100 to dry for at least 10 minutes (>15°C) / 30 minutes (<15°C) or maximum 2 hours (follow manufacturer's instructions). Close bottle immediately after use.
- 3 **Treatment of steel studs (Primer)**
  - Shake can of Sika Primer 206 G&P thoroughly and apply a thin coat with a clean dry brush or sponge
  - Allow Sika Primer 206 G&P to dry for a minimum of 10 minutes (>15°C) / 30 minutes (<15°C) or a maximum 24 hours (follow manufacturer's instructions).

- 4 **Prepare Barestone Internal panels**


- Abrade bonding area (ie the areas on the back of the panel that will coincide with the steel stud/ furring channel) with a polyester scouring pad (i.e. 3M Scotch Brite Pad 7447)
- Remove dust from abrasion
- Shake can of Sika Primer 206 G&P thoroughly and apply a thin coat with a brush on the bond area as shown in 'Figure 7.09: Barestone Internal Panel Preparation'. Note - Do not dip brush directly into the bottle as this may introduce contaminants. Rather, decant the contents into a suitable clean container. Close the bottle immediately after use.
- Allow Sika Primer 206 G&P to dry for a minimum of 10 minutes, or maximum 24 hours

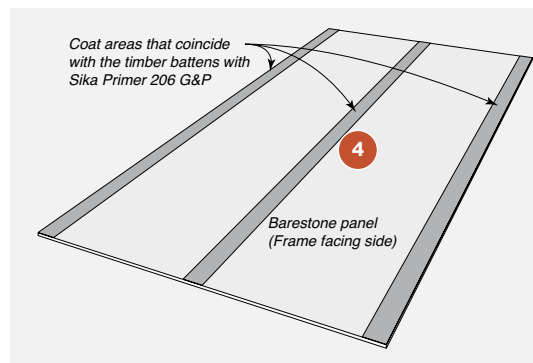**FIGURE 7.09** Barestone Internal Panel Preparation




- 5 **Apply the Sika decorative closed cell tape** centrally onto the primed vertical joints at double studs to the full height of the wall.

**FIXING OPTION 2****CONCEALED FIXING – ADHESIVE TO STEEL STUD**

- 6** Apply SikaTack double sided panel tape to the double stud on both sides of the closed cell tape. Leave the release paper on the SikaTack panel tape and stop short at the top and bottom plates. Refer to 'Figure 7.10: Closed Cell tape, adhesive, Tape Layout' and 'Figure 7.11: Sheet Joint Layout'.
- 7** Cut a “v” on the SikaTack Panel-10 adhesive\* cartridge nozzle of 8mm wide x10mm deep. Continuously run two triangular beads (8mm wide, 10mm deep) of SikaTack Panel-10 adhesive vertically to the bond area on the steel studs either side of the SikaTack panel tape but stop short at the top and bottom plates.
- \*Note: the open time (or working time) of SikaTack Panel-10 is 45 minutes (at normal conditions of 23 degrees celsius, 50% relative humidity), so the panel must be pressed onto the adhesive/tape system within that time or less.

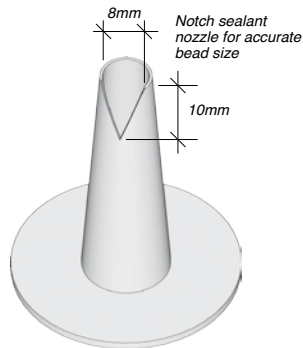

- 8** At intermediate studs Run SikaTack panel tape and one bead of SikaTack Panel-10 adhesive the full height of the stud but stop short at the top and bottom plates. Refer to 'Figure 7.12: Intermediate Stud Layout'.

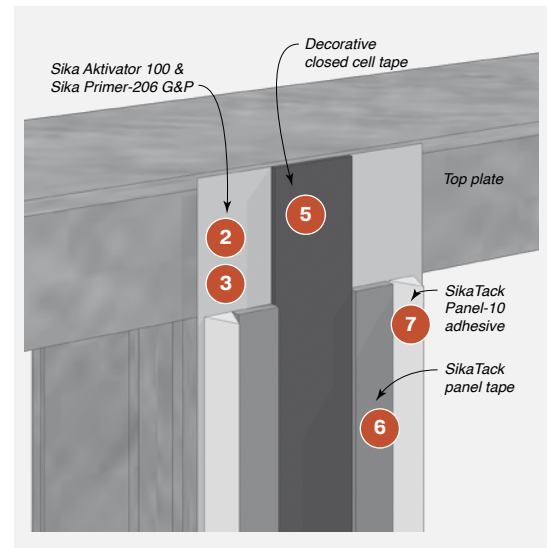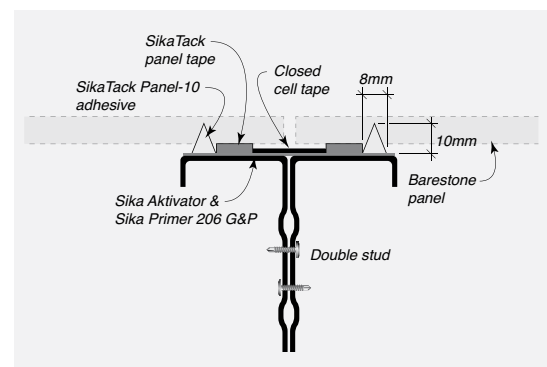
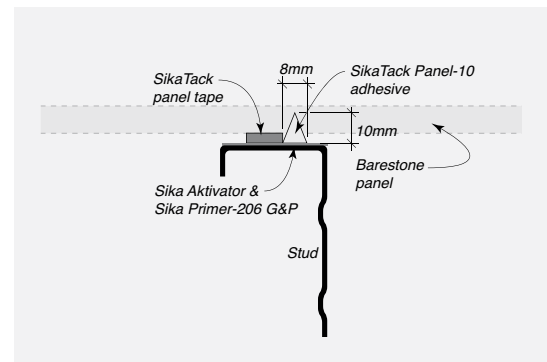
**FIGURE 7.10** Closed Cell Tape, Adhesive Layout**FIGURE 7.11** Sheet Joint Layout**FIGURE 7.12** Intermediate Stud Layout

**FIXING OPTION 2****CONCEALED FIXING – ADHESIVE TO STEEL STUD**

- 9 **Install horizontal backing strip** by removing release paper on the SikaTack panel tape and pressing onto the tape and adhesive, as shown in 'Figure 7.13: Horizontal Backing Strip'.
- 10 When panels are ready to be installed, remove white release paper on the SikaTack panel Fixing tape and firmly press the panel onto the tape and adhesive. The tape will provide adequate hold strength while the adhesive sets. Refer to 'Figure 7.14: Panel Installation'.

Allow 6mm clearance between bottom panel and floor to allow for frame movement.

Tip – Use packers (or cut panels) at base (vertical) and horizontal joints to ensure uniform joint spacings. Remove once the adhesive is set.

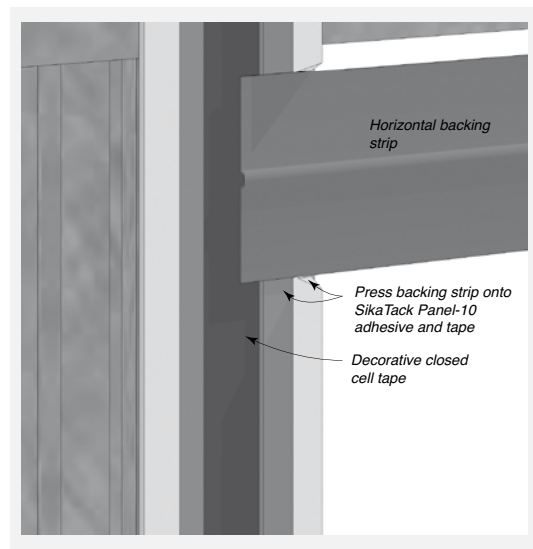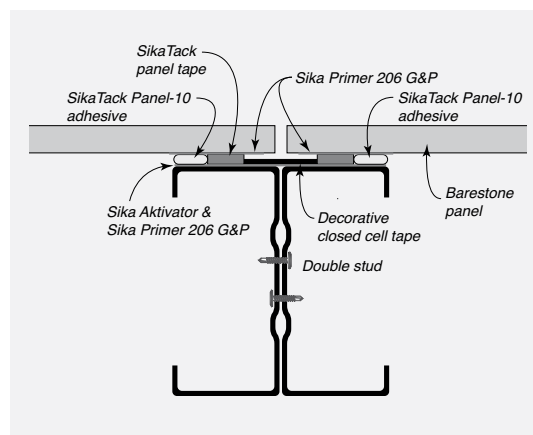**FIGURE 7.13** Horizontal Backing Strip**FIGURE 7.14** Panel Installation

**FIXING OPTION 3****CONCEALED FIXING – TIMBER BATTENS FOR RETROFIT OVER EXISTING LININGS**

The following pre-install checklist may assist with ensuring you have the best possible outcome when using Barestone Internal.



Check quality and quantity of panels and components before installing. If there is any sign of damage or visible defects in panels, or the colour/finish is not in keeping with the owners aesthetic requirements DO NOT INSTALL. Contact Cemintel to address any issues.

- Confirm framing alignment is in accordance with standards (timber frames as per AS1684, steel frames as per AS/NZ4600 Cold-Formed Steel Structures and AS3623 Domestic Metal Framing). Pack to straighten if necessary. Check with certifier regarding packing materials.
- Confirm your panel layout to determine the location of joints. Ensure studs are correctly located and of the appropriated thickness. Install additional studs if required (double studs are required at all vertical sheet joints).
- Install vertical and horizontal battens where required.
- Ensure **studs** have been appropriately treated with primers (refer below for details).
- Ensure **timber battens** have been appropriately treated with primers (refer to following for details).
- Ensure **panels** have been appropriately treated (refer to following for details).
- Check the panel size and trim if required to maintain the correct expressed joint size.
- Confirm correct placement of closed cell tape gaskets, SikaTack panel and tape and adhesive.
- When installing the panel ensure the panel is firmly pressed against the tape and that good contact is made.
- Use packers to ensure even joint spacings, remove once adhesive is set.


**FIGURE 7.15** Concealed fixing on Timber Frame






**FIXING OPTION 3****CONCEALED FIXING – TIMBER BATTENS FOR RETROFIT OVER EXISTING LININGS**

- 1 Locate existing studs and mark batten locations.** Ensure that the face of the wall is aligned. Note that due to the addition of an expressed joint, misalignment can occur between panel joints and batten placement. Sheet trimming may be required to maintain uniform joint spacing and to ensure battens remain on studs.
- 2 Install timber battens at head and base of wall**  
Install 66mmx18mm timber battens horizontally across the top and bottom of the wall. Fix with screws, nails or adhesive.
- 3 Install timber battens vertically.** Install 92mmx18mm timber battens at all vertical joint locations. Install 66mmx18mm timber battens at intermediate stud locations. Fix at 300mm centres. Vertical battens may be installed slightly off stud centre but batten fixing must be driven into the stud (ie the edge of the batten must still be on the stud). In some case this may help when allowing for an express joint. Refer to 'Figure 7.16: Batten Fixing to Existing Stud'. Nail or screw fix at 400mm maximum centres.

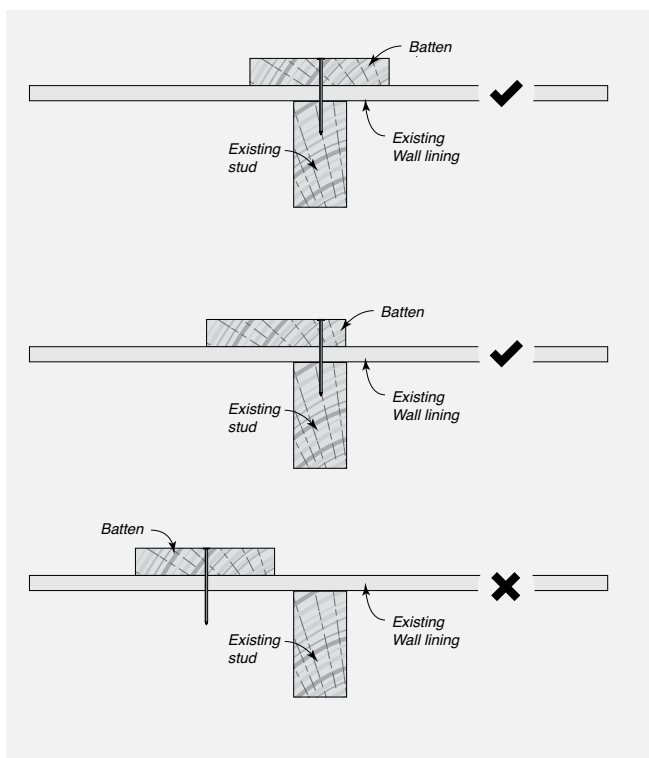**FIGURE 7.16** Batten Fixing to Existing Stud

- 4 Install timber battens horizontally.** Install 66mmx18mm timber battens at all horizontal joint locations. Fix at 300mm centres with screws, nails or adhesive. Refer to 'Figure 7.17: Horizontal Panel Joint'.

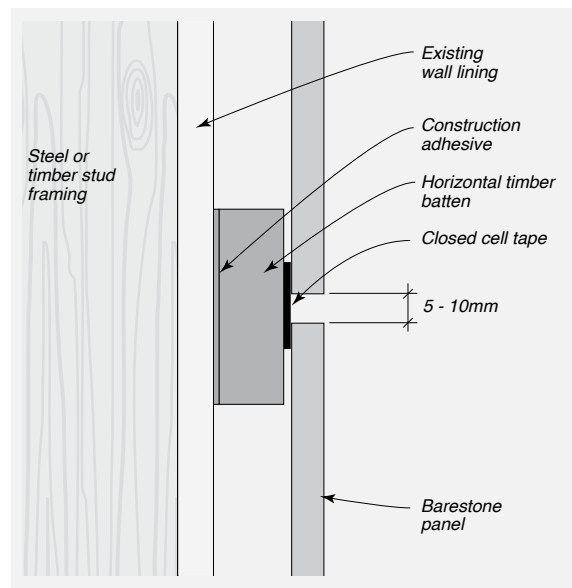**FIGURE 7.17** Horizontal Panel Joint**5 Treatment of timber battens**

- Dry wipe timber batten faces.
- Apply a thin coat of Sika Primer 215 to the entire stud face using a dry, clean brush or sponge.
- Let dry for at least 30mins (>15°C) / 60mins (<15°C) or maximum 24hrs (follow manufacturer's instructions).

Note that Aktivators should NOT be used on porous substrates such as timber.

**6 Prepare Barestone Internal panels**

- Abrade bonding area (ie the areas on the back of the panel that will coincide with the timber studs) with a polyester scouring pad (i.e. 3M Scotch Brite Pad 7447)
- Remove dust from abrasion
- Shake can of Sika Primer 206 G&P thoroughly and apply a thin coat with a brush on the bond area as shown in 'Figure 7.18: Barestone Internal Panel Preparation'.


Note - Do not dip brush directly into the bottle as this may introduce contaminants. Rather, decant the contents into a suitable clean container. Close the bottle immediately after use.

Allow Sika Primer 206 G&P to dry for a minimum of 10 minutes, or maximum 24 hours.

## 07

## INSTALLATION

- 7 **Apply the Sika decorative closed cell tape** centrally onto the primed battens where panel joints occur, for the full length of the battens.
- 8 **Apply SikaTack double sided panel tape to the vertical battens where panel joints occur on both sides of the closed cell tape.** Leave the release paper on the SikaTack panel tape and stop short at the top and bottom plates. Refer to 'Figure 7.19: Vertical Panel Joint Layout'.
- 9 **Cut a “v” on the SikaTack Panel-10 adhesive\* cartridge nozzle** of 8mm wide x 10mm deep. Continuously run two triangular beads (8mm wide, 10mm deep) of SikaTack Panel-10 adhesive vertically to the bond area on the timber battens either side of the SikaTack panel tape but stop short at the top and bottom plates. \*Note: the open time (or working time) of SikaTack Panel-10 is 45 minutes (at normal conditions of 23 degrees celsius, 50% relative humidity), so the panel must be pressed onto the adhesive/tape system within that time or less.

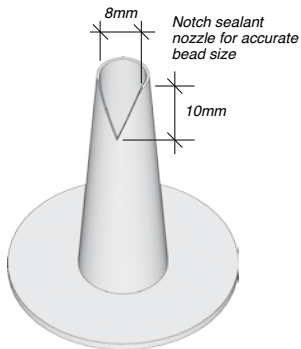

- 10 **At intermediate studs.** Run SikaTack panel tape and one bead of SikaTack Panel-10 adhesive the full height of the batten but stop short at the horizontal closed cell tape. Refer to 'Figure 7.20: Intermediate Batten Layout'.
- 11 **When panels are ready to be installed,** remove white release paper on the SikaTack panel tape and firmly press the panel onto the tape and adhesive. The tape will provide adequate hold strength while the adhesive sets. Refer to 'Figure 7.21: Panel Installation'.

When using steel frames, at deflection heads, do not fix Barestone Internal to deflection head track.

Tip – Use packers (or cut panels) at base and horizontal joints to ensure uniform joint spacings. Remove once the adhesive is set.

FIGURE 7.18 Barestone Internal Panel Preparation

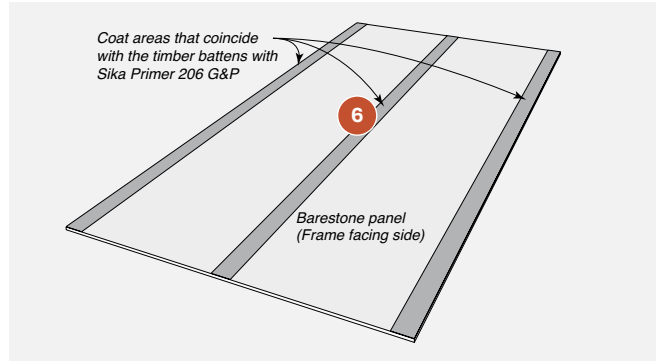


FIGURE 7.19 Vertical Panel Joint Layout

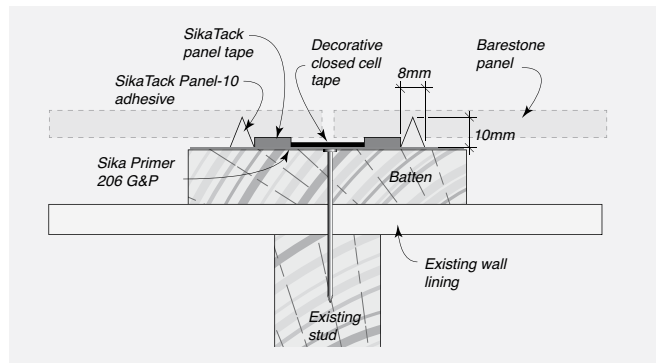


FIGURE 7.20 Intermediate Batten Layout


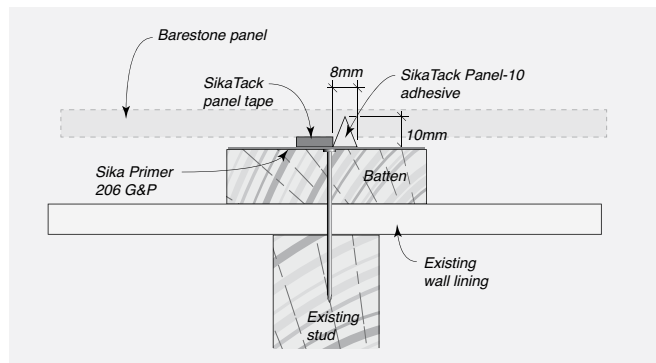


FIGURE 7.21 Panel Installation

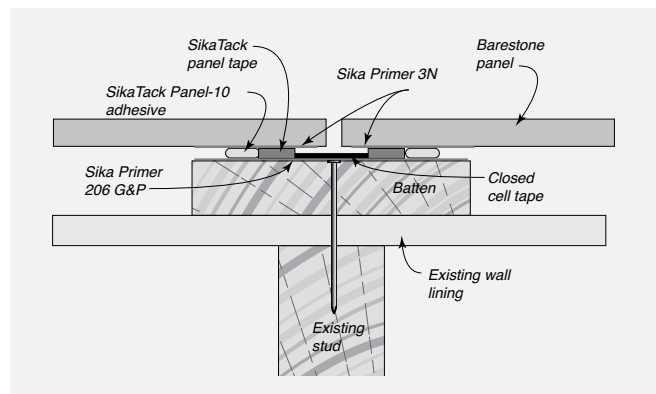

**FIXING OPTION 4****CONCEALED FIXING – TIMBER SPLIT BATTENS**

The following pre-install checklist may assist with ensuring you have the best possible outcome when using Barestone Internal.

- Confirm framing alignment is in accordance with standards (timber frames as per AS1684, steel frames as per AS/NZ4600 Cold-Formed Steel Structures and AS3623 Domestic Metal Framing). Pack to straighten if necessary. Check with certifier regarding packing materials.
- Confirm your panel layout to determine the location of joints. Ensure studs are correctly located and of the appropriated thickness. Install additional studs if required (double studs are required at all vertical sheet joints).
- Install vertical and horizontal MDF strips where required.
- Ensure **horizontal timber battens** have been appropriately treated with primers (refer to following for details).
- Ensure **panels** have been appropriately treated (refer to following for details).
- Check the panel size and trim if required to maintain the correct expressed joint size.
- Confirm correct placement of decorative closed cell tape and SikaTack Panel-10 adhesive.
- When installing the panel ensure the panel is firmly pressed against the tape and that good contact is made.
- Use packers to ensure even joint spacings, remove once adhesive is set.



Check quality and quantity of panels and components before installing. If there is any sign of damage or visible defects in panels, or the colour/finish is not in keeping with the owners aesthetic requirements **DO NOT INSTALL**. Contact Cemintel to address any issues.

**FIGURE 7.22** Concealed Fixing on Timber or Steel Frame



## 07

## INSTALLATION

**FIXING OPTION 4****CONCEALED FIXING – TIMBER SPLIT BATTENS**

- 1 **Ensure that studs are at correct centres** and that there are double studs at all vertical joints. Mark batten locations. Ensure that the face of the wall is aligned.
- 2 **Install MDF strips vertically.** Cut minimum 25mm wide batten strips from an MDF sheet and install centrally at all double studs for the full height of the wall.

For timber framing, brad nail at 600mm centres staggered, with an edge distance of 5mm. Where screw fixing, pre-drill MDF strips at 5mm edge distance vertical centres staggered. For steel framing screw fix at 600mm. Refer to 'Figure 7.27 Panel Installation – Vertical Joint'.

- 3 **Install MDF strips horizontally.** Cut minimum 25mm wide strips of MDF sheet and install at horizontal joints for the full joint width, and at the head and base.

Fasten at each stud. Brad nail for timber framing, pre-drill and screw fix for steel frame.

- 4 **Apply the Sika decorative closed cell tape** centrally onto the MDF batten strips, horizontally and vertically the full length of the strips.
- 5 **Make split battens.** Cut a 140mm wide MDF plank in half down the centre at 45°. Refer to 'Figure 7.23: Split Batten Preparation'.
- 6 **Fix split battens.** Fix the lower half of the split batten horizontally onto the frame with screws. Place the upper batten half into position on the lower half. Battens are to be 100mm in from sheet ends, and at 800mm maximum spacings. Refer to 'Figure 7.24: Split Batten Assembly'.
- 7 **Treatment of split timber battens.**
  - Dry wipe timber batten faces.
  - Apply a thin coat of Sika Primer 215 to the top half of the split batten using a dry, clean brush or sponge.
  - Let dry for at least 30mins (>15°C) / 60mins (<15°C) or maximum 24hrs (follow manufacturer's instructions).




Note that Aktivators should NOT be used on porous substrates such as timber.

- 8 **Prepare Barestone Internal panels**

- Abrade bonding area (ie the areas on the back of the panel that will coincide with the top half of the split batten) with a polyester scouring pad (i.e. 3M Scotch Brite Pad 7447)
- Remove dust from abrasion
- Shake can of Sika Primer 206 G&P thoroughly and apply a thin coat with a brush on the bond area as shown in figure 7.25: Barestone Internal Panel Preparation.

Note - Do not dip brush directly into the bottle as this may introduce contaminants. Rather, decant the contents into a suitable clean container. Close the bottle immediately after use.

Allow Sika Primer 206 G&P to dry for a minimum of 10 minutes, or maximum 24 hours.

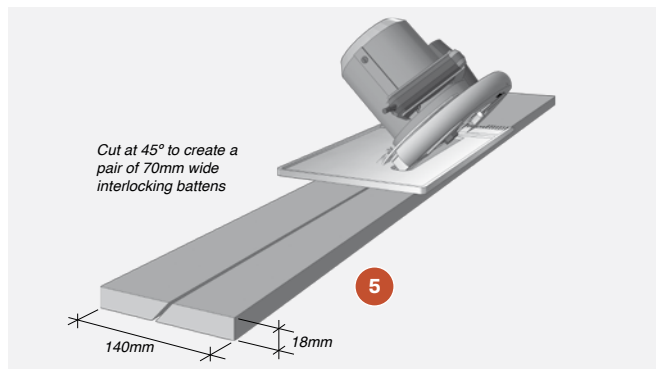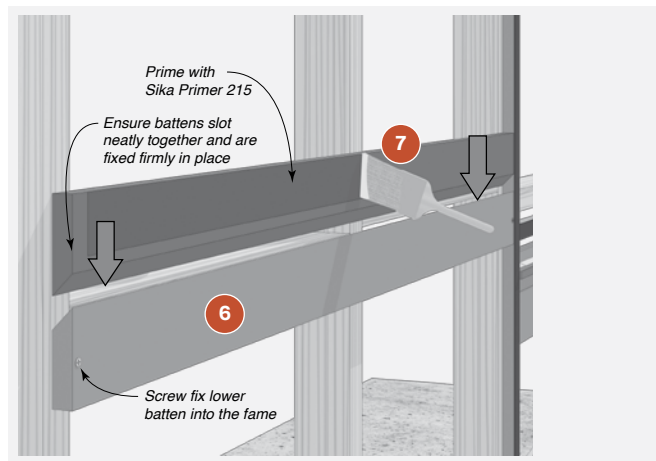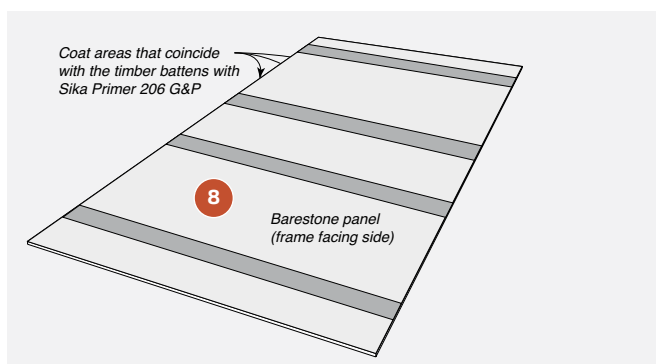**FIGURE 7.23** Split Batten Preparation**FIGURE 7.24** Split Batten Assembly**FIGURE 7.25** Barestone Internal Panel Preparation



## INSTALLATION

07

**FIXING OPTION 4****CONCEALED FIXING – TIMBER SPLIT BATTENS – INSTALLATION**

**9 Apply SikaTack double sided panel tape to the top half of the split batten.** Leave the release paper on the SikaTack panel tape. **Cut a “v” on the SikaTack Panel-10 adhesive\* cartridge nozzle** of 8mm wide x10mm deep. Run a triangular bead (8mm wide, 10mm deep) of SikaTack Panel-10 adhesive to the bond area on the MDF battens above the SikaTack panel tape but stop 20mm short of the batten ends. Refer to ‘Figure 7.26: Adhesive and Tape on Split Batten’.



\*Note: the open time (or working time) of SikaTack Panel-10 adhesive is 45 minutes (at normal conditions of 23 degrees celsius, 50% relative humidity), so the panel must be pressed onto the adhesive/tape system within that time or less.

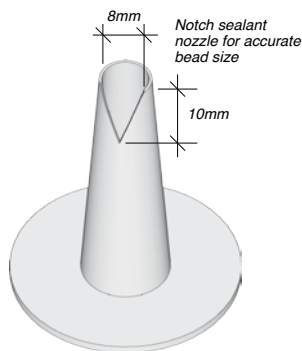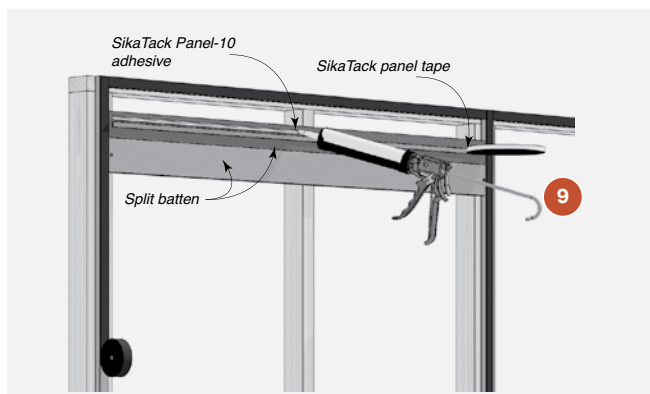**FIGURE 7.26** Adhesive and Tape on Split Batten

**10 When panels are ready to be installed,** remove white release paper on the SikaTack panel tape and firmly press the panel onto the tape and adhesive. The tape will provide adequate hold strength while the adhesive sets.

Tip - Use packers (or cut panels) at base (vertical) and horizontal joints to ensure uniform joint spacings. Remove once the adhesive is set.

\*Note: a 18mm minimum expressed joint gap is required at the top of the panels to allow the split battens to be “unhooked” and the panel removed.

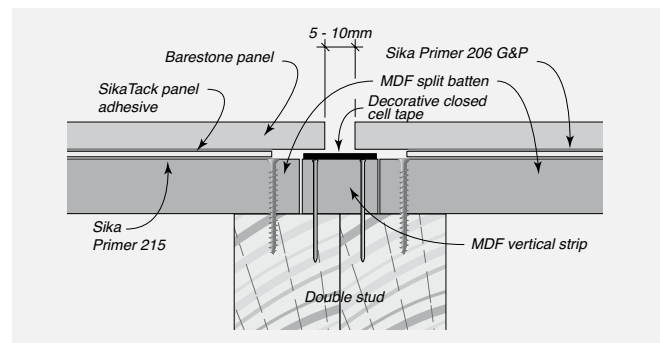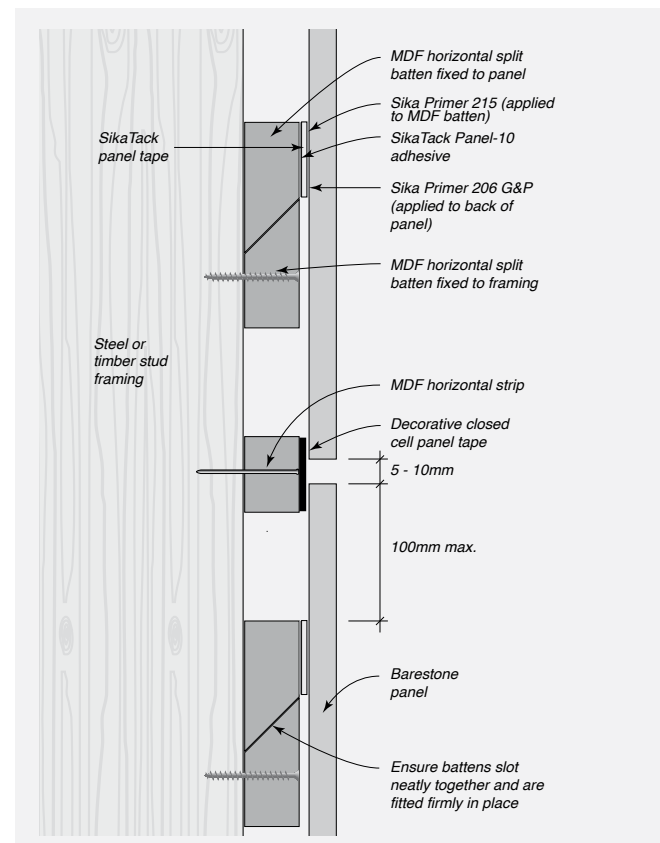**FIGURE 7.27** Panel Installation – Vertical Joint**FIGURE 7.28** Concealed Horizontal Split Battens

**FIXING OPTION 5****EXPOSED FIXING – SCREW OR RIVET TO STEEL FRAMING**

The following pre-install checklist may assist with ensuring you have the best possible outcome when using Barestone Internal.



Check quality and quantity of panels and components before installing. If there is any sign of damage or visible defects in panels, or the colour/finish is not in keeping with the owners aesthetic requirements DO NOT INSTALL. Contact Cemintel to address any issues.

- Confirm framing alignment is in accordance with AS/NZ4600 Cold-Formed Steel Structures and AS3623 Domestic Metal Framing. Pack to straighten if necessary. Check with certifier regarding packing materials.
- Confirm your panel layout to determine the location of joints. Ensure studs are correctly located and of the appropriated thickness. Install additional studs if required (double studs are required at all vertical sheet joints).
- Confirm the use of the backing strip if required.
- Check the panel size and trim cut if required to maintain the correct expressed joint size.

**FIGURE 7.29** Exposed Screw or Rivet Fixing to Steel Frame






**FIXING OPTION 5****EXPOSED FIXING – SCREW OR RIVET TO STEEL FRAMING**

- 1 **Ensure that studs are at correct centres** and that there are double studs at all vertical joints. Ensure the face of the frame is aligned.
- 2 **Apply the Sika decorative closed cell tape** centrally onto the vertical joints at double studs to the full height of the wall.
- 3 **Cut Barestone Internal panels as required.** Cut panels as required. Run a fine sandpaper block over the edge (taking care not to scratch the panel surface).
- 4 **Pre-drill panel holes.** This should be done prior to lifting panels into place and can be done off site. Panel holes need to be drilled a minimum 100mm from the horizontal edge and a minimum of 20mm from the vertical edge (600mm max centres). If using Barestone rivets, use the recommended Cemintel 9.5mm carbide tipped drill bit with centring tip (refer fig 7.30). If using exposed head screws, use the 6mm drill bit (refer fig 7.31).

The size of the hole drilled is designed to match the size of the rivet rubber sleeve. The use of other tools for this purpose may reduce fixing capacity.

DO NOT use hammering action when drilling.


For efficiency you can neatly stack 3 or 4 sheets and drill through all at the same time. Take care to avoid damaging the panel with the drill chuck when approaching the end of the hole by using a timber block. Clean/sweep away any dust from holes as this can stick to the panel.

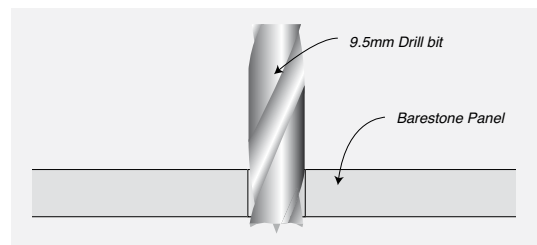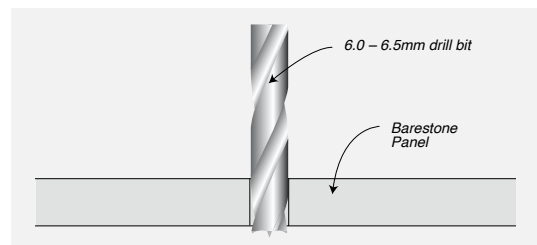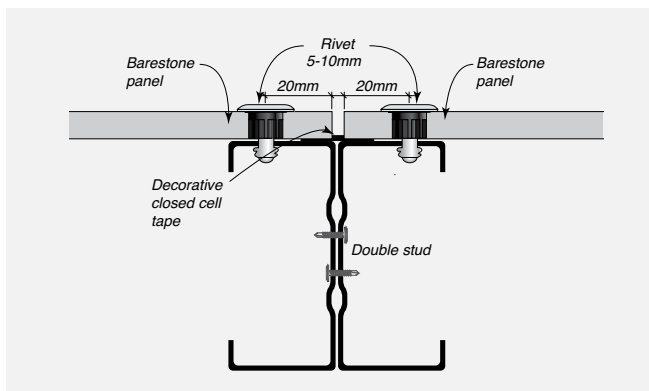**5 Install Wall Panels****FIGURE 7.30** Pre-drilling Panels – Rivet Fix**FIGURE 7.31** Pre-drilling Panels – Screw Fix**FIGURE 7.32** Panel Installation – Fastener (Screw or Rivet)



**FIXING OPTION 5****EXPOSED FIXING – SCREW OR RIVET TO STEEL FRAMING (OR FURRING CHANNELS) – INSTALLATION**

- 5 **Install wall panels. 5a. When fixing panel using rivets,** lift panel into place, clamp down level to identify horizontal and vertical planes. Using the Rivet Centralising Tool, drill 4.1mm rivet holes through the pre drilled panel holes into steel framing or furring channel. This specialised tool creates a rivet hole, which matches the size of the shaft of the rivet, precisely in the centre of the panel hole (refer Figure 7.33).

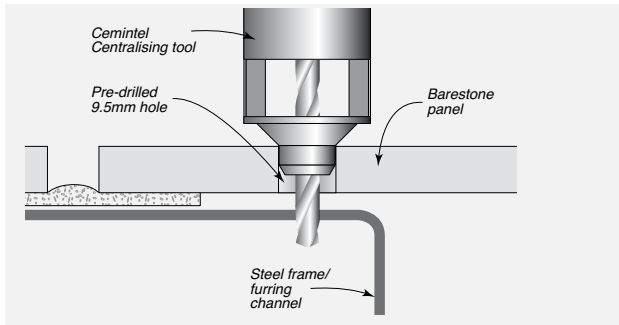**FIGURE 7.33** Cemintel Centralising Tool for Rivet Fixing

**Fix panel using rivets** – Install Rivet Gun nose piece onto the Gesipa Accubird battery operated blind rivet gun. The nose piece has a slight concave shape which serves to create a small (0.5mm) clearance between the panel face and the rivet flange.



This enables a slight movement across the panel which allows for expansion and contraction cycles and differential movement of the frame while reducing damage to the panel face (refer Figure 7.34).

Fix panel starting at the top corner. Place the rivet gun with the rivet gun head onto the rivet shaft. Push the panel firmly against the framing/gaskets and operate the gun to pull the rivet through panel hole into the predrilled top hat.


**5b. When fixing panel using exposed head screws** – use Prolox Resytork Pan Head Self Drilling screws at 600mm vertical centres at all stud locations.

Ensure screws or rivets are 20mm minimum in from the panel edges and 50mm from panel ends (refer Figure 7.32).

- 6 **Install horizontal backing strip if required.** Slip the backing strip behind the panel before completing the riveting of the panel. Barestone Internal panels are generally installed with a maximum 9mm expressed joint in both horizontal and vertical directions (a small cut piece of panel can be used as a spacer to easily measure joint widths and ensure consistency). Once positioned, fasten bottom row of rivets. Refer to 'Figure 7.35: Horizontal Backing Strip Installation'.

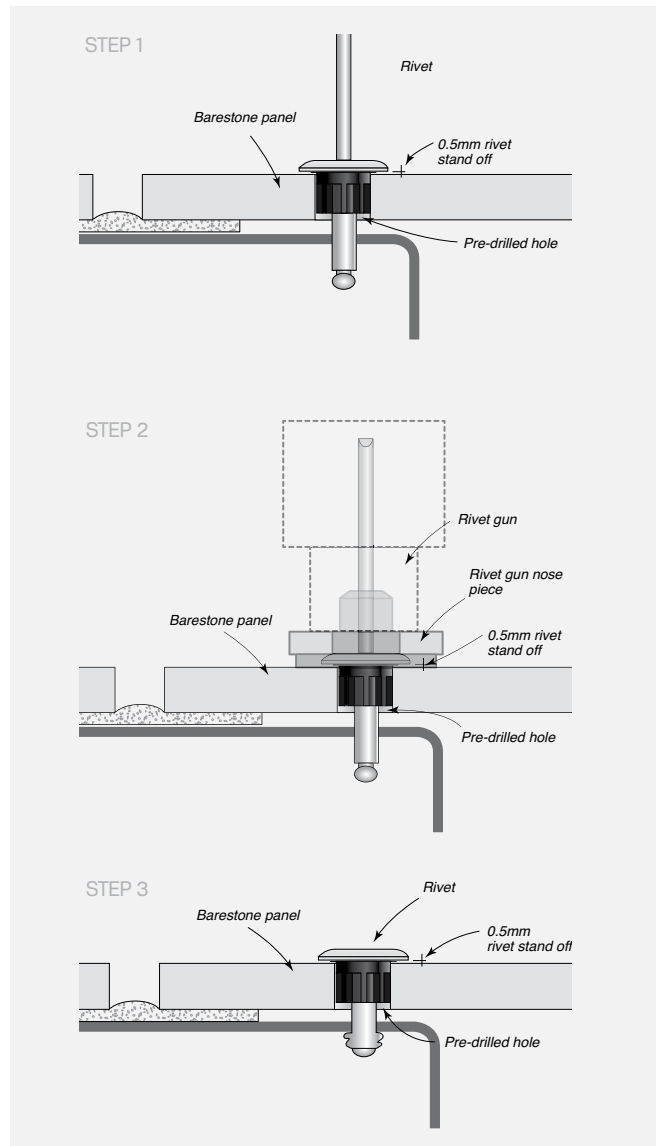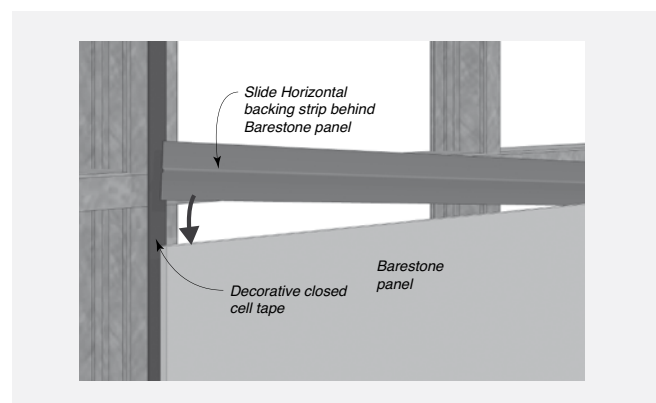**FIGURE 7.34** Fixing with Rivets**FIGURE 7.35** Horizontal Backing Strip Installation



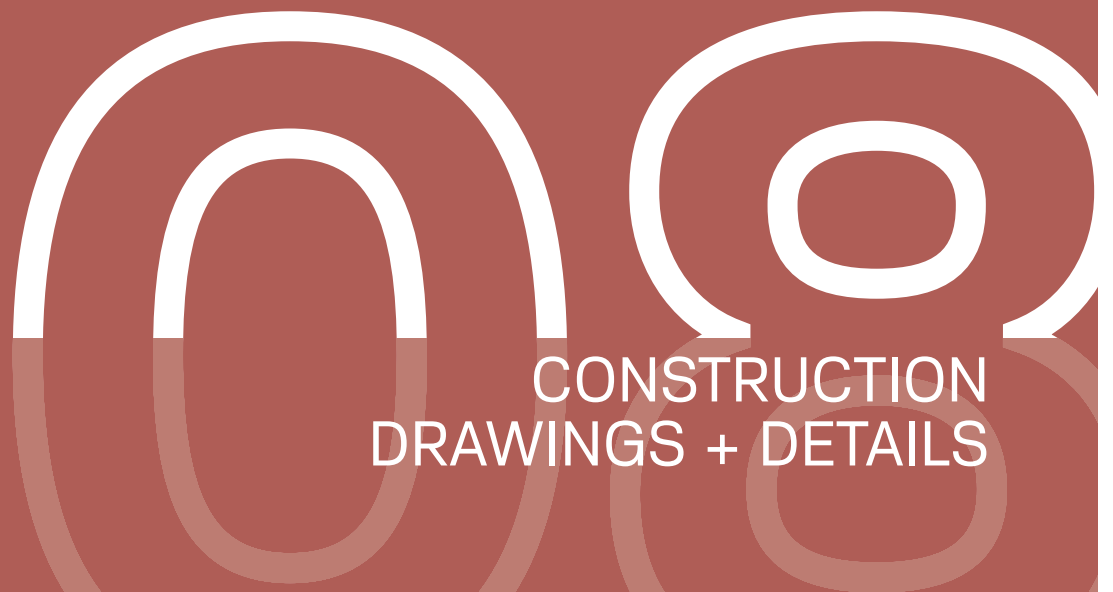

CONSTRUCTION  
DRAWINGS + DETAILS

---

## Drawings Index

| SECTION               | DESCRIPTION             | FIGURE<br>REFERENCE | PAGE<br>NUMBER |
|-----------------------|-------------------------|---------------------|----------------|
| <b>Base Details</b>   | Base Detail             | 8.01                | 37             |
|                       | Base Detail Alternative | 8.02                | 37             |
| <b>Head Details</b>   | Head Detail             | 8.03                | 37             |
|                       | Head Detail Alternative | 8.04                | 37             |
| <b>Corner Details</b> | Obtuse Angle            | 8.05                | 38             |
|                       | External Corner         | 8.06                | 38             |
|                       | Internal Corner         | 8.07                | 38             |

CONSTRUCTION DRAWINGS AND DETAILS



Note: Drawings are interchangeable for timber or steel substrates with the exception of the fasteners.

FIGURE 8.01 Base Detail

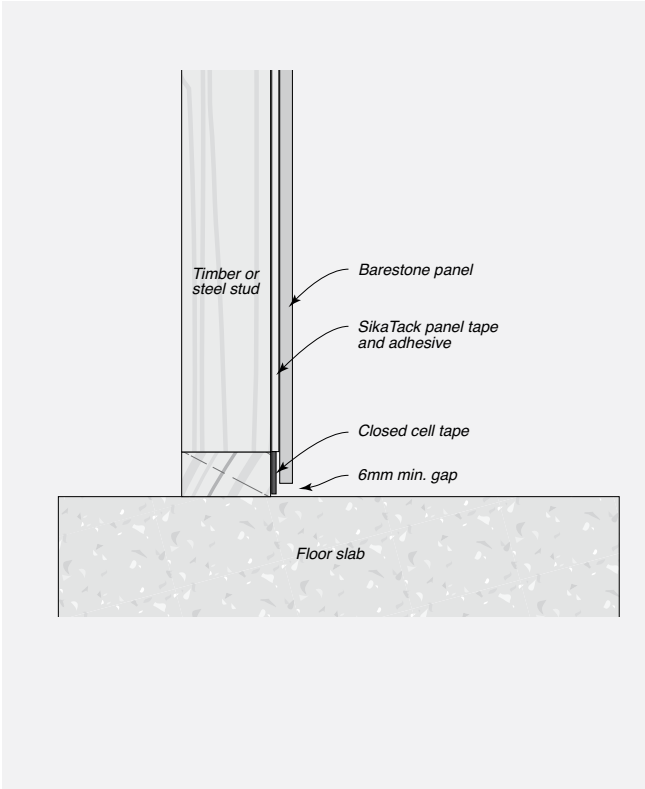


FIGURE 8.02 Base Detail Alternative

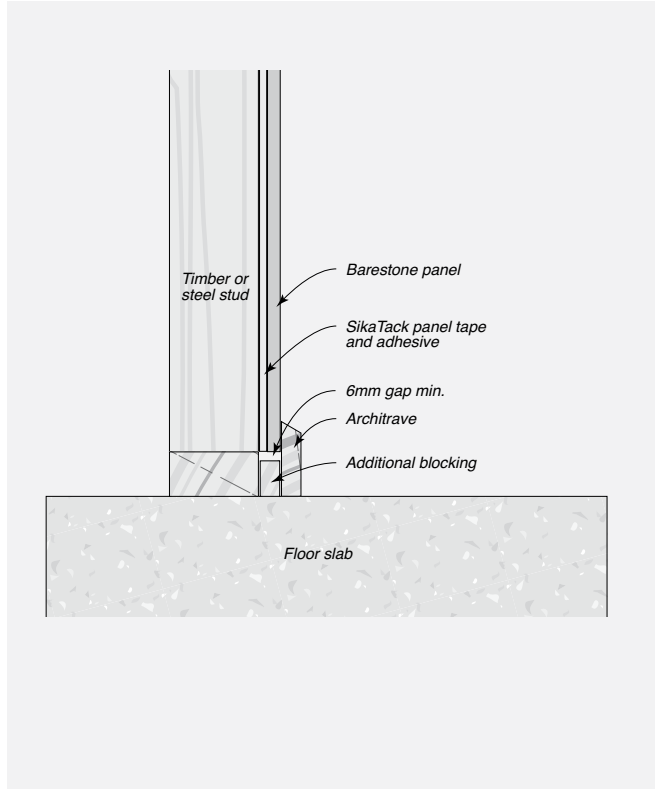


FIGURE 8.03 Head Detail


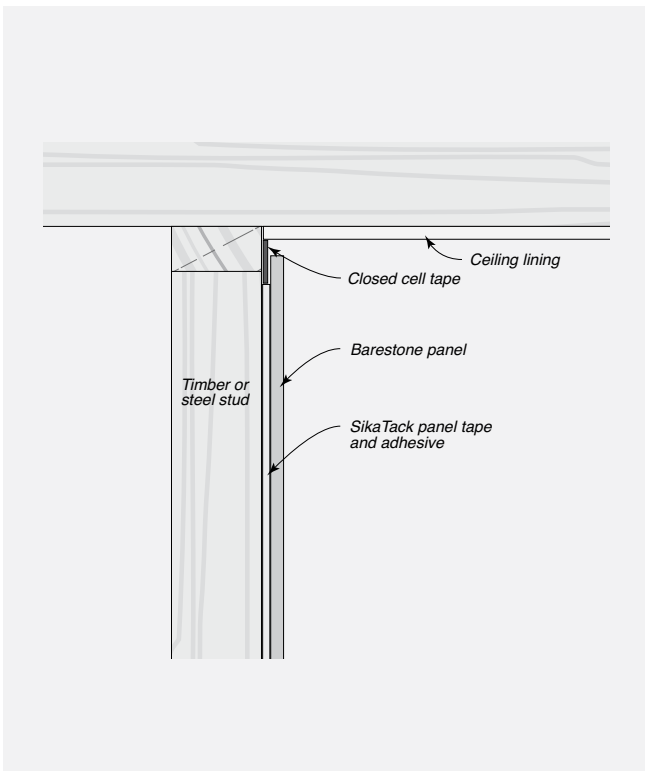


FIGURE 8.04 Head Detail Alternative




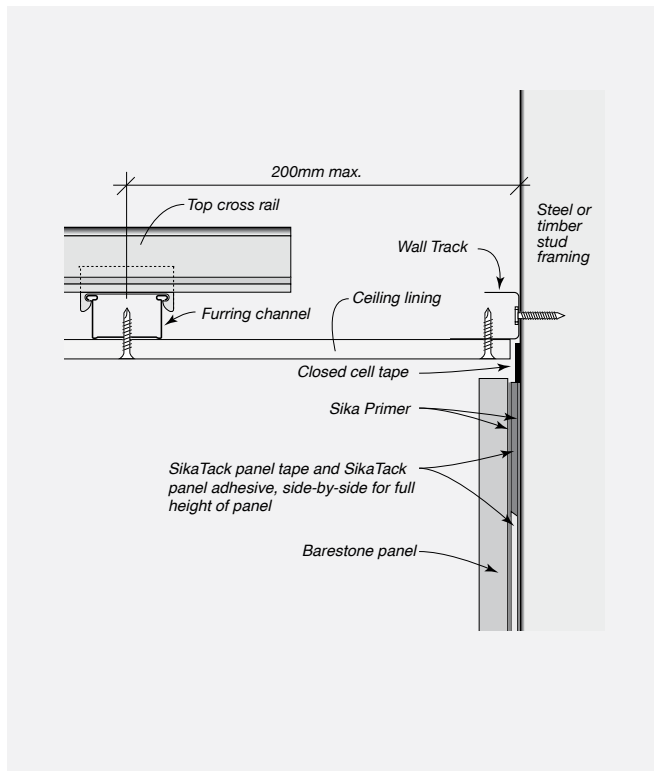


## CONSTRUCTION DRAWINGS AND DETAILS

Note: Drawings are interchangeable for timber or steel substrates with the exception of the fasteners.


**FIGURE 8.05** Obtuse Angle

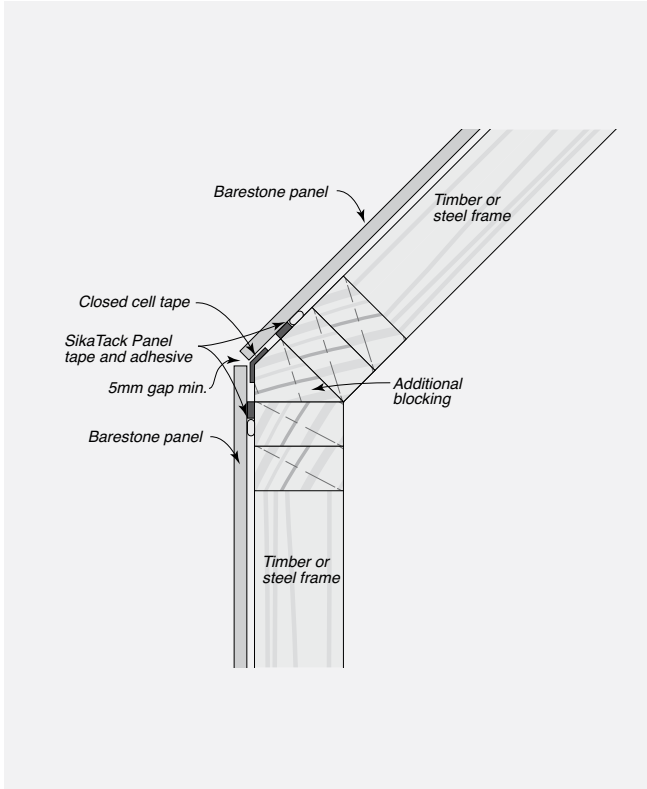

**FIGURE 8.06** External Corner

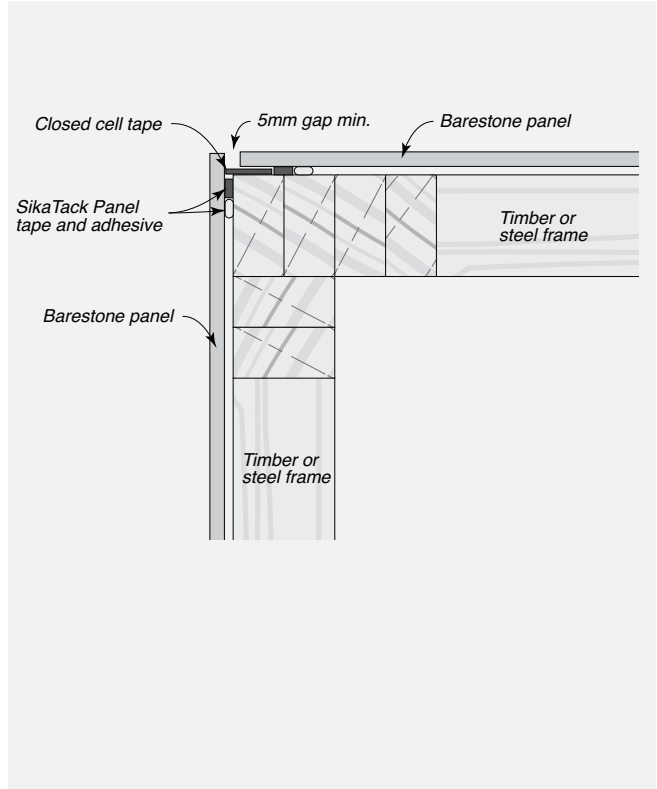

**FIGURE 8.07** Internal Corner

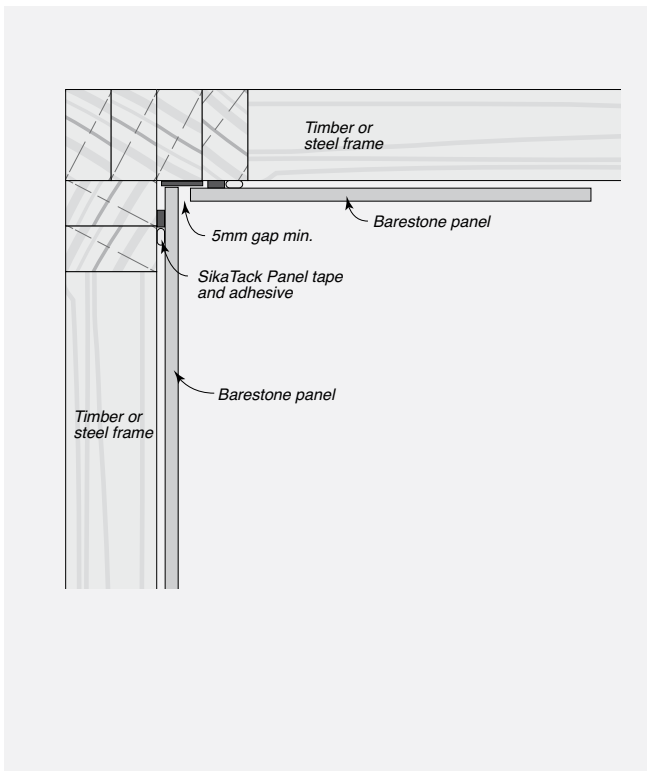




**SAFETY, HANDLING  
+ GENERAL CARE**



## SAFETY, HANDLING + GENERAL CARE

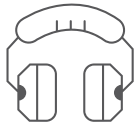

### Health, Safety and Personal Protection Equipment (PPE)

**As manufactured, panels will not release airborne dust, but during drilling, cutting and sanding operations, cellulose fibres, silica and calcium silicate dust may be released. Breathing in fine silica dust is hazardous and prolonged exposure may cause bronchitis, silicosis or cancer.**

Panels contain silicas that are harmful if inhaled. Protective clothing and breathing equipment should be worn when cutting products. When cutting, drilling or grinding Barestone Internal panels using power tools, always ensure the work area is properly ventilated. Cemintel recommends fitting power

tools with appropriate dust collection devices or the operator should wear an approved (P1 or P2) dust mask and safety glasses. An approved dust mask (AS1715 and AS1716) and safety glass (AS1337) must be worn. Cemintel recommends that hearing protection also be worn.

Safety Data Sheet information is available at [www.cemintel.com.au](http://www.cemintel.com.au)

### Recommended Safe Working Practices

|                                  |   |
|----------------------------------|---|
| Cutting Outdoors                 | <ol style="list-style-type: none"> <li>1. Position cutting station so wind will blow dust away from the user or others in the working area.</li> <li>2. Use a dust reducing plunge saw equipped with a dust extraction system.</li> </ol>   |
| Sanding/Drilling/Other Machining | When sanding, drilling or machining, you should always wear a P1 or P2 dust mask and warn others in the immediate area.   |
| Important Reminders              | <ol style="list-style-type: none"> <li>1. <b>NEVER</b> use a power saw indoors.</li> <li>2. <b>NEVER</b> use a saw blade that is not purpose-made for cutting fibre cement products.</li> <li>3. <b>NEVER</b> dry sweep.</li> <li>4. <b>ALWAYS</b> follow tool manufacturers' safety recommendations.</li> <li>5. <b>ALWAYS</b> maintain tools in a clean condition.</li> </ol> |

## Handling & General Care

### Storage

All Cemintel Barestone Internal panels must be stacked flat, clear of the ground and supported at 300mm maximum centres on a level platform. Panels must be kept dry, preferably stored inside the building. Care must be taken to avoid damage to edges, ends and surfaces. Panels must be dry prior to fixing, hence if it is necessary to store outside, the product must be protected from the weather.

### Handling

Care must be taken to avoid damage to edges, ends and surfaces. Panels should be carried horizontally on edge by two people.

### Cutting

Panels should be cut from the back using a power saw. Cemintel recommends using the Makita Plunge Saw Kit (165485) with guide rail and appropriate blade.

All exposed cut edges **MUST BE SEALED TO PREVENT MOISTURE ABSORPTION**. Refer to 'Components' table for appropriate materials.

### Penetrations

Penetrations in panels may be cut or drilled prior to installation. Cut from the back or drill from the front. Cut penetrations oversize by 8-10mm all around. Mask, prime and fill gaps with sealant in accordance with recommended methods and products.

# 10

WARRANTY, CLEANING  
+ MAINTENANCE

## WARRANTY, CLEANING + MAINTENANCE

### Warranty

Barestone Internal panels have a product warranty of 10 years.

The full product warranty is available for download at [www.cemintel.com.au](http://www.cemintel.com.au)

### Inspection, Repair and Maintenance

Regularly inspect panel surfaces and follow cleaning procedures when required.

It is recommended storing additional panels in case any panels are damaged in the future.

If a panel needs to be removed and replaced the following steps should be followed –

#### Concealed Fix options

Cut the centre of the panel to expose the tape and adhesive beads. These can then be cut using a suitable tool and the remainder of the panel removed. (refer to Figure 10.01 Panel Cutting). Caution – take care when cutting, check for services in the wall and ensure a minimal cut depth is used.


### Cleaning

Barestone Internal panels have a polyacrylic coating which enables the surface of the panel to repel liquids such as coffee, red wine, sauces and tea.

To minimise absorption, any spills should be cleaned up immediately using the following process –

1. Do not wipe, rub or scrub as this may mark the surface or spread the spill
2. If the spill is liquid, blot immediately with dry, absorbent paper towel or cloth
3. If colour or liquid residue is left after Step 2 or the liquid has dried or evaporated, dab the area with a clean damp cloth, using only water
4. If colour or liquid residue remains, use a PH neutral cleaning product, again dabbing the area, then remove the cleaner with a damp cloth. Allow the surface to dry.

**FIGURE 10.01** Panel cutting

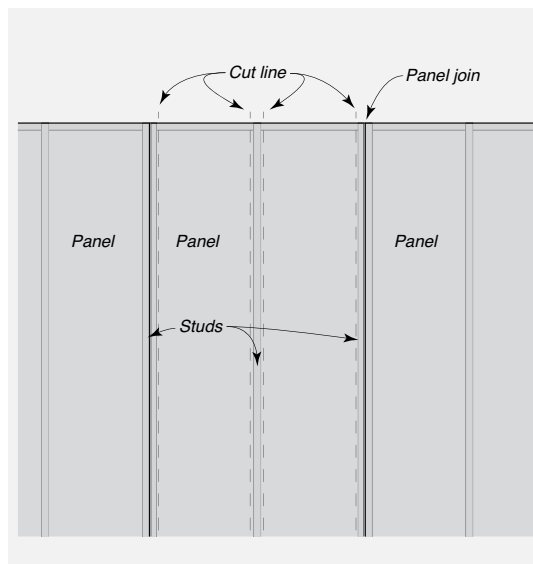

#### Rivet/Screw Fix options

Remove fasteners and take out panel.  
Install replacement panel taking care not to install fastener in previous rivet holes.







---

## Our Offices

### **Brisbane**

768 Boundary Road  
Coopers Plains QLD 4108

### **Sydney**

376 Victoria Street  
Wetherill Park NSW 2164

### **Melbourne**

277 Whitehall Street  
Yarraville VIC 3013

### **Adelaide**

Lot 100 Sharp Court  
Mawson Lakes SA 5095

### **Perth**

19 Sheffield Road  
Welshpool WA 6106

### **Hobart**

11 Farley Street  
Derwent Park TAS 7009

### **Darwin**

Cnr Stuart Highway &  
Angliss Street  
Berrimah NT 0828

**cemintel.com.au**  
1300 236 468

For Design and Technical Support:  
**DesignLink** – 1800 621 117

Cemintel is a trading entity of CSR Building Products Limited (ACN 008 631 356).

Disclaimer: Information presented in this document is supplied in good faith and to the best of our knowledge, was accurate at the time of preparation. Products are subject to natural variation as part of the manufacturing process. Product images may vary from actual product in regard to colour and surface finish. The provision of this information should not be construed as a recommendation to use any of our products in violation of any patent rights or in breach of any statute or regulation. Users are advised to make their own determination as to the suitability of this information in relation to their particular purpose or specific circumstances. Since the information contained in this document may be applied under conditions beyond our control, no responsibility can be accepted by Cemintel, or its staff for any loss or damage caused by any person acting or refraining from action as a result of misuse of this information.